DESCRIPTION: 5 BOX M/U TV/OTTOMAN BED

1 HOURS

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY




FLOOR AREA 2.0m X 2.7m



REQUIRED ASSEMBLY SPACE

ASSEMBLY INSTRUCTIONS

REQUIRED ASSEMBLY TOOLS

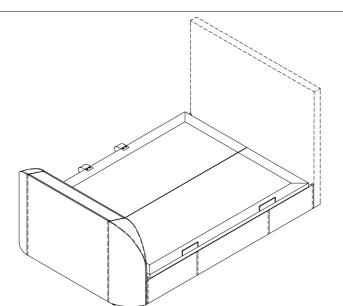


Important Information


- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.
- We suggest you retain these instructions for future reference.

Product Information

- TV bed.
- Upholstered Bed. Conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 80lbs (37kg)
- Compatible with slimline LED televisions with a screen size of 20" to 42".
- Can accommodate some TV's up to 43", however the TV size must be within the maximum T.V dimensions.
- Maximum T.V dimensions D75mm x W970mm x H580mm (WITHOUT STAND)

Whereas every effort has been made to allow this product to utilise the maximum number of TV's available it is not possible to accommodate every product in an ever changing market. It is the responsibility of the customer to ensure suitability of the TV to the TV bed before attempting operation. It is the customers responsibility to ensure all wiring is correctly placed in accordance with both the TV and TV bed manufacturer.

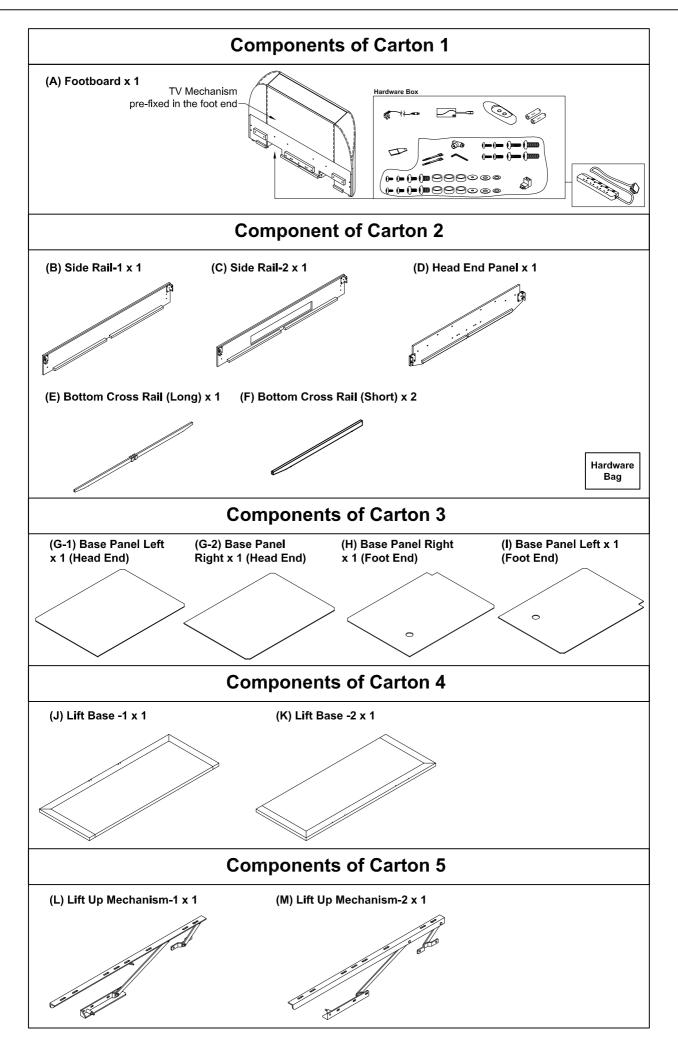

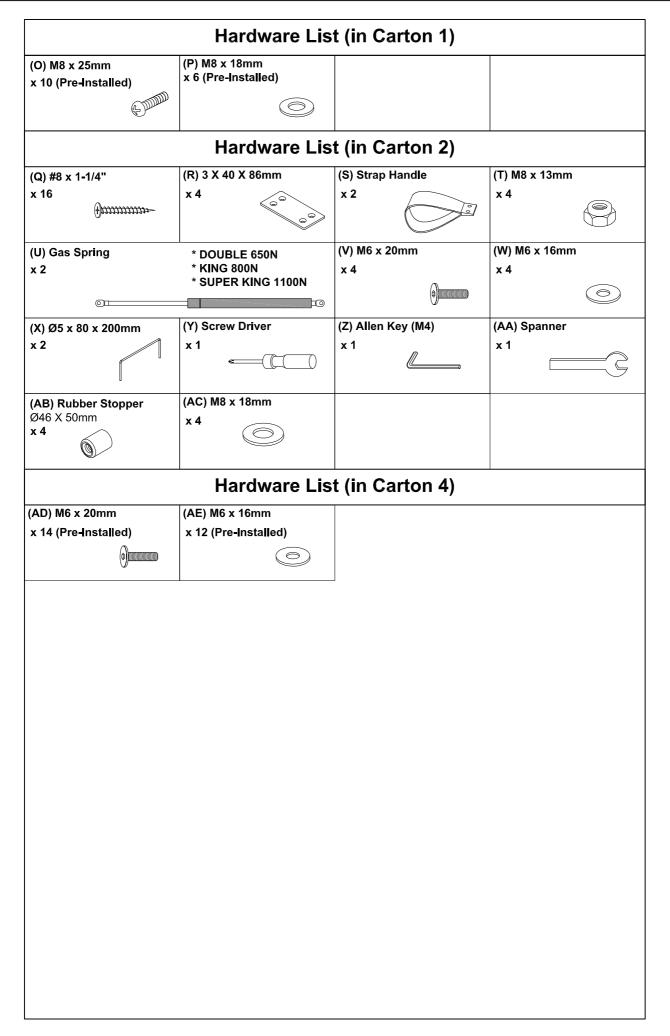

Tips before you start!

- 1. Please check that all parts are present before you start the assembly of your furniture.
- 2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely. (Minimum Two Persons)
- 4. We recommend where possible, all items are assembled near to the area where they will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. Please ensure that your bed is placed on a level floor area. (Avoid setting up and installing your bed on uneven floor surface.)
- 6. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
- 7. During assembly please take care not to over-tighten any fittings, as this may damage the product.

Care and Maintenance of your Furniture

- Please do not jump on your furniture.
- Never allow any kind of liquid to remain on your furniture. This can cause finishes to de-laminate. Take care
 when spraying Perfume and deodorants etc as the vapour can
 settle on the fabric surface and case damage.
- The bed should always be lifted into position if moved for cleaning.

Care Instructions (For PU & Fabric)


- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration
 of the colour.
- Periodically check & re-tighten any fastener.
- Periodically dust lightly with a clean soft cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- Never allow any kind of liquid to remain on your furniture. This can cause finishes to de-laminate. Take care when spraying Perfume and deodorants etc as the vapour can settle on the fabric surface and case damage.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

Care Instructions (for Velvet Material)


- If liquid has spilled onto the velvet, soak it up with a paper towel or cloth. Make sure there is no food or debris left on the material. Combine a small amount of dish soap and water in a bucket, mixing it until it become soapy. Soak the cloth in the soapy water and apply it gently to the stain. Use the soapy cloth to blot the stain until it disappears. It is important for the velvet fabric to dry quickly. Use a hair dryer on a lukewarm setting to accelerate the drying process.
- Carefully apply the upholstery cleaner to velvet with soft sponge, leaving the velvet's pile undisturbed. After it is clean, be sure to vacuum and brush the velvet follow the grain always.
- A steam cleaner is perfect for removing stains, dirt and debris, disinfecting the velvet fabric, without leaving any damage to it.
- If you have concerns regarding liquid/stain removal on your product, please consult a professional cleaning company.


DO NOT USE ANY POWER TOOLS AS THIS MAY DAMAGE THE FRAME AND WILL INVALIDATE ANY CLAIM


- Before assembly please decide which side you require the "DVD / Media Compartment "Part C" side rail with opening will need to be placed at that side
- Loosen the bolts located in the chosen head end. (Note: only loosen the bolts Do NOT remove them.)
- Hook the side rail over the bolts as shown.
- Repeat the action on the opposite side.

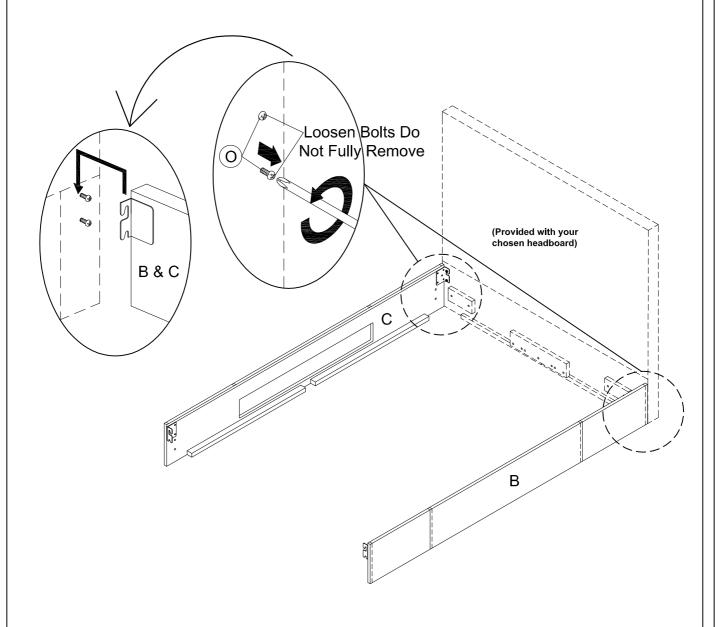

- Carefully remove the foot end from carton 1, remove the Hardware Box and all extra transportation packaging from inside.
- To do this you will need to gently lay the foot end on it's back. Before doing so please
 ensure the area is completely free of anything that may cause damage or press into the
 fabric. Place a protective cover on the floor to avoid possible damage.
- The controls and hardware are held in place by string please carefully cut these and remove.

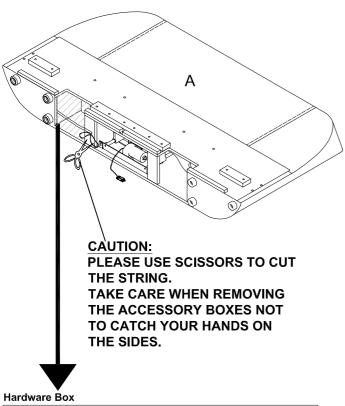

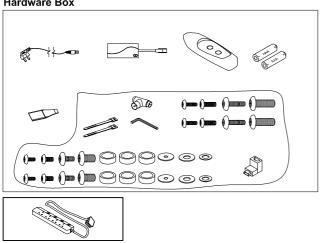

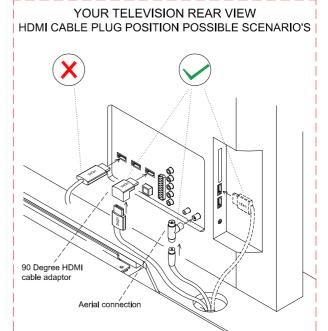

Attention Please Note: Connecting Your HDMI or Aerial Cable as shown in diagram (X) can seriously Damage Your TV sockets.

To reduce this possibility we have supplied 90 degree adaptors for both HDMI and Aerial connections.





This will reduce the cable protrusion and lessen the possibility of the cable colliding with the bed frame.

These can be found in the bed frame hardware pack located in Box 1 (foot end). Please refer to the diagram above for the correct fitting of cables. More detailed information can also be found on step 12 of your assembly instructions.

The manufacturer or retaller will not accept responsibility for any damages arising from incorrect installation.

ATTENTION! PLEASE NOTE:

In the event you are experiencing any technical difficulties and you require additional assistance/ support with your product 'Mechanical/ Electrical' function - Please contact:

SUPPORT EMAIL: support@bssbfurnitureinnovation.com UK PRODUCT SUPPORT HOTLINE: 01462600064


Contact your retailer for all other issues such as damage, missing or faulty components (non electrical) or anything else of a non technical/electrical nature.


Step 3-1

- Carefully lift the foot end back to it's upright position.
- · Loosen the bolts located in the foot end.
- Please note these should only be loosened and NOT removed.
- Hook the side rail brackets over the bolts on both sides.

Step 3-2

- Attach the Head End Panel "D" as shown.
- Loosen the bolts attach to the side rail as shown. (Note: only loosen the bolts do NOT remove them)
- Hook the head end panel over the bolts as shown.
- Repeat the action on the opposite side.
- Tighten all the bolts in side rail & head end panel. (Ensure all angles are at 90°)

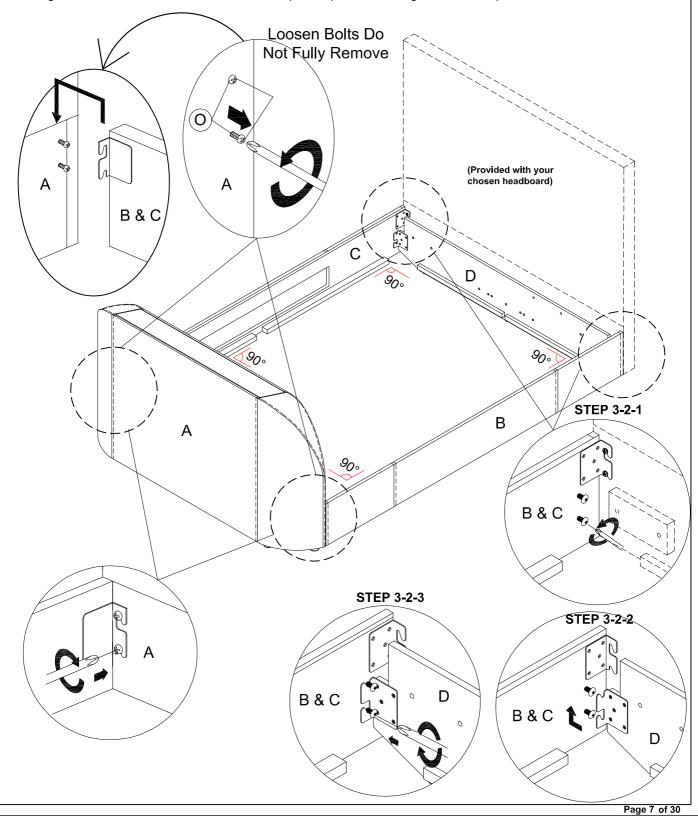

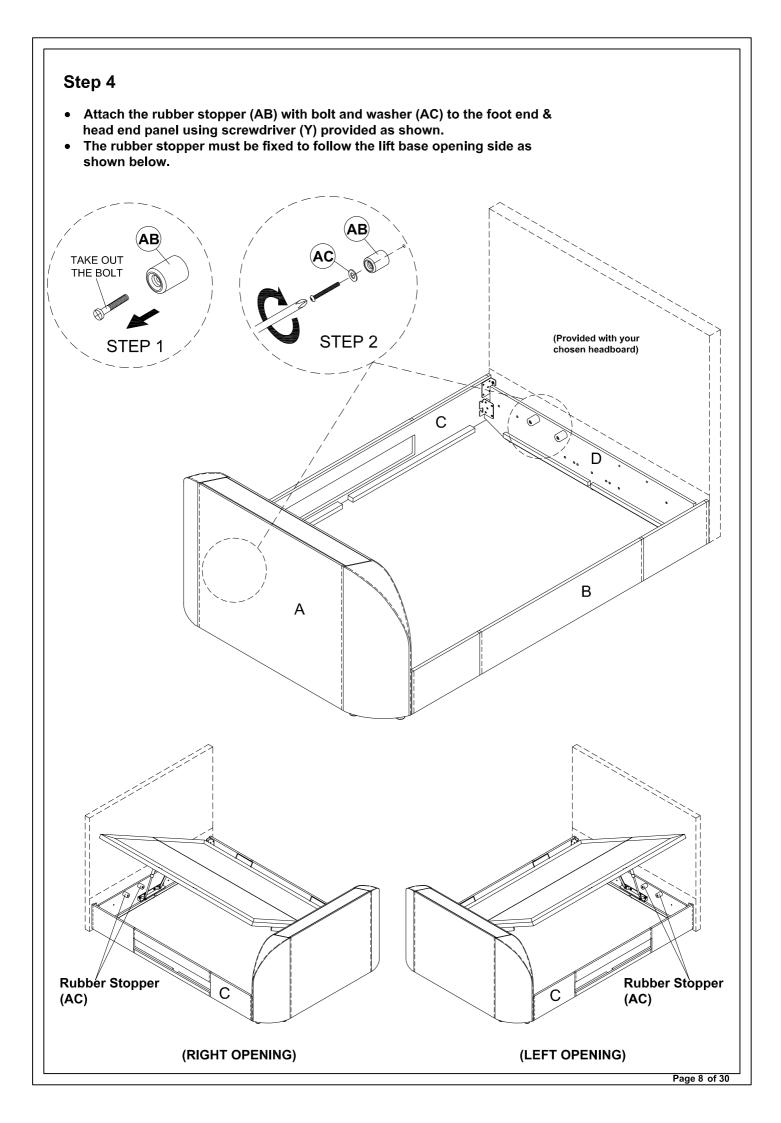


• Installing Batteries in the TV mechanism Wireless Remote Control.


Size: AAA - Ø10.5 X T44.5mm

Spec.: 1.5V

(AAA) Batteries x 2pcs (provided) install to battery case. Caution: May explode or leak if recharged, inserted improperly, mixed with different battery types. Do not open battery. Dispose of used batteries promptly. Keep away from children.

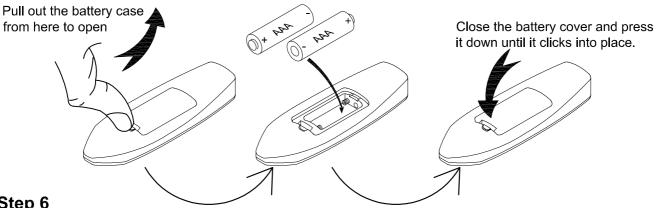


- . Connecting the TV mechanism cable as shown. It is essential that connecting to the power supply is done in this order. Failure to do so will result in damage to your product.
- Connect the Power Cable (13) to the TV mechanism adaptor (11), then plug the TV mechanism adaptor power plug into the TV mechanism receiver, which is pre-installed in the footboard, as shown.
- Step 6-2 Connect the power cable (13) power plug into an 4 socket extension lead, then switch on.

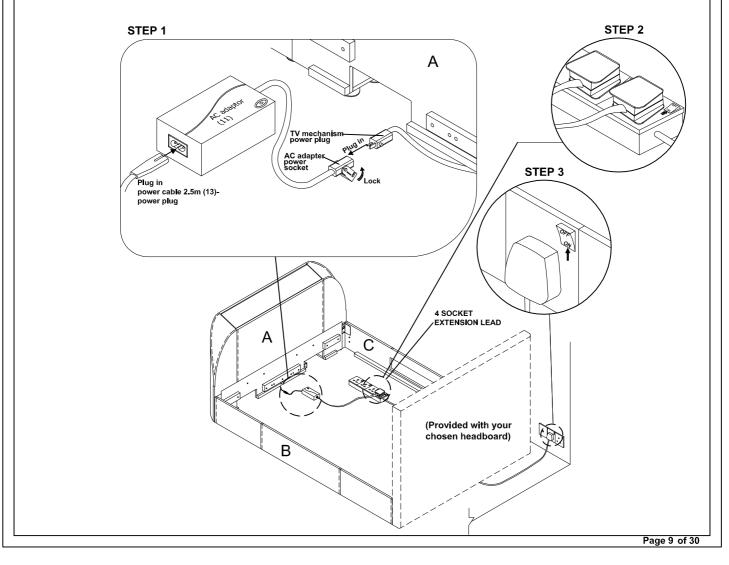

- Continually press the "UP" switch on the wireless remote control, which will then lift the TV
 mechanism up until the footboard TV lid opens to its full extent. Continually press the "DOWN"
 switch on the wireless remote control to lower the TV mechanism.
- If the wireless remote control does not operate the TV lift mechanism, please follow the SYNCHRONIZED SETTING shown in below.

 Wireless Remote Control

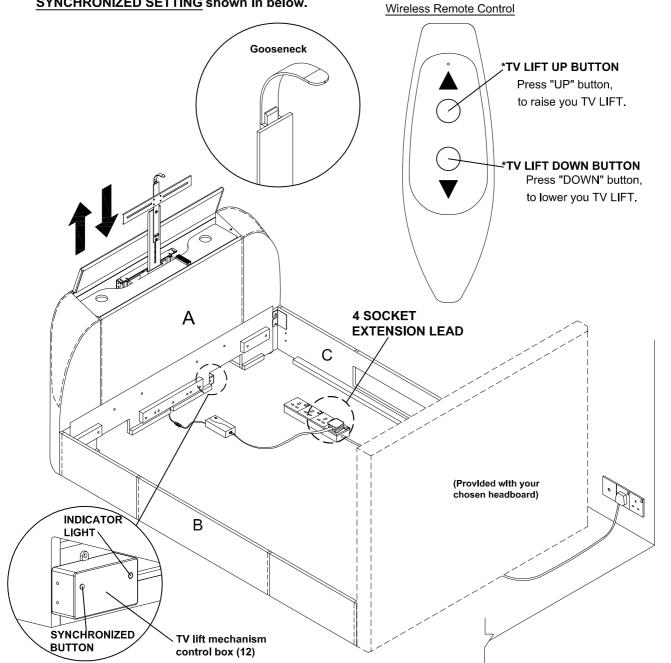

TV LIFT MECHANISM CONTROL BOX SYNCHRONIZATION


- Ensure there are two working batteries fitted correctly inside the remote control.
- For initial start up, must synchronize the wireless remote control & control box.
- A) Press and hold the synchronization button on the TV lift control box located in the right hand mouse hole for 3 seconds, the indicator light will be flash red.
- B) Simultaneously, press together the up and down button on wireless remote control continuously for 3 seconds until the control box indicator light turn from the flash red to the long bright. This means the synchronization was success and can unclasp fingers from wireless remote control.
- C) Now the wireless remote control is ready to use.
- D) If the above step haven't been done within the 30 seconds, then the synchronization was not success and need to repeat the step again.

Repeat if necessary......

In the event the remote control is not synchronizing with the TV Lift Mechanism.

Please contact UK Support: 01462 600 064

- TV cable connection plan. Make sure you have all the relevant cable connections required (HDMI cable, TV Aerial cable, TV power cable, Optical cable etc...) before you install the TV.
- The cable management holes are provided in the TV Tray to help you manage the cable's to keep them tidy
 and free from snags. Pass all cables cleanly through these holes. While ensuring any cable slack is taken up
 from the bottom end of the footboard.

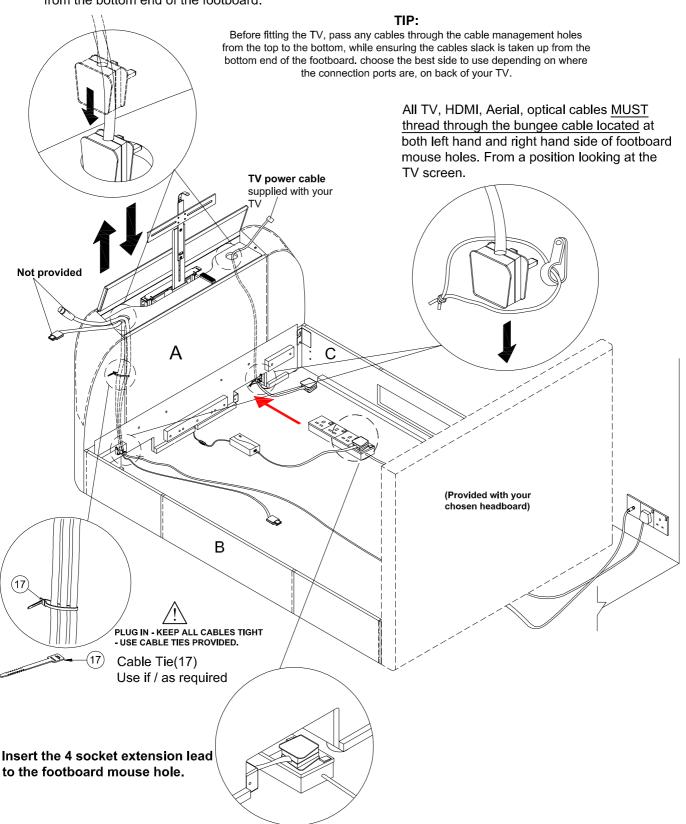


Place all cables through the 'Cable Management' holes to prevent any damage to the cable when the TV Lift Mechanism is operating. Make sure all your the cables are long enough to let the TV Lift Mechanism move freely.

All the cables MUST be carefully pulled and fully extended.


Group the cables together as required below the TV Tray using cable tie(17) provided.

- To adjust the TV tray to suit the height of your TV (without stand). Please follow step below
 - 9.1 : Measure and make a note of the height (without stand!).
 - 9.2 : Use the Allen key (20) to slightly loosen the up/down adjuster bolts-half turn only, do not remove all. (Please refer diagram below)
 - 9.3 : Slide "the <u>TV vertical bar up/down,</u> while using the measure line matching the noted measurement height of your TV. Then fully tighten the bolts.
 - 9.4 : When the TV is mounted it should sit neatly just beneath the lid opening Gooseneck.

Note: TV's lower than the minimum height of 440mm, are not compatible with the TV mounting bracket system.

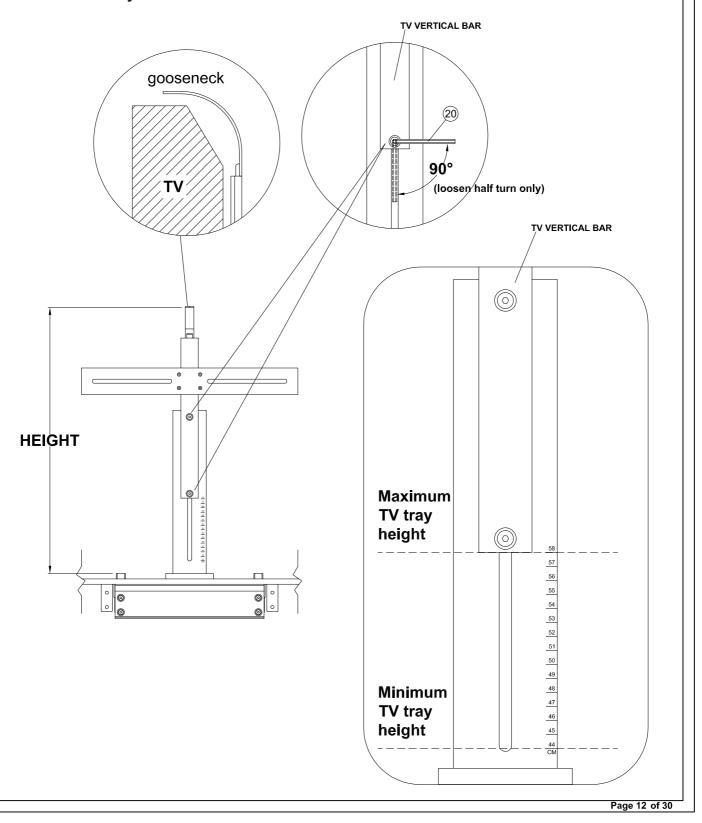


- You are now ready to install your TV.
- Raise the mechanism to it's highest position.
- While standing behind your television (on the outside end of the footboard). 'Facing the headboard'
- Carefully place the TV on top of the two rubber TV mounting pedestals ensuring the Gooseneck arm is perfectly inline with the 'centre' of the TV.

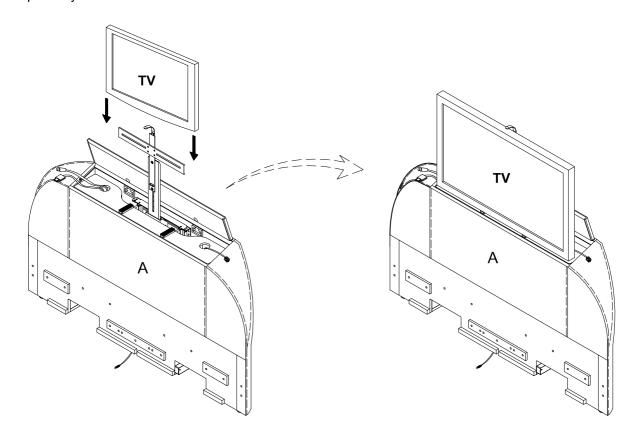



Step 11

TV Flat Bracket (vesa bracket).


Please note: Item (21), (22), (23), (24), (29), (30), (31) or (32) TV fixing screws are compatible with most TV models. However sizes may differ depending on the TV model. If smaller or larger size screws are required these should be sourced from your local hardware store or TV specialist. Washers may also be required. Your retailer may also supply alternative fixings depending on the TV model supplied at the time.

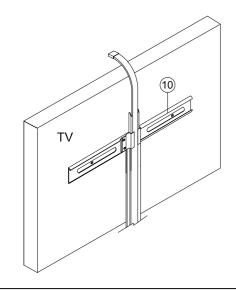

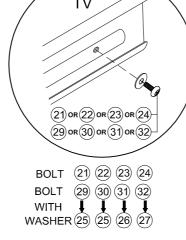


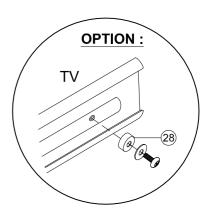


In the event you find the screws are too long for the TV with bracket please use Plastic collar (28) if required.

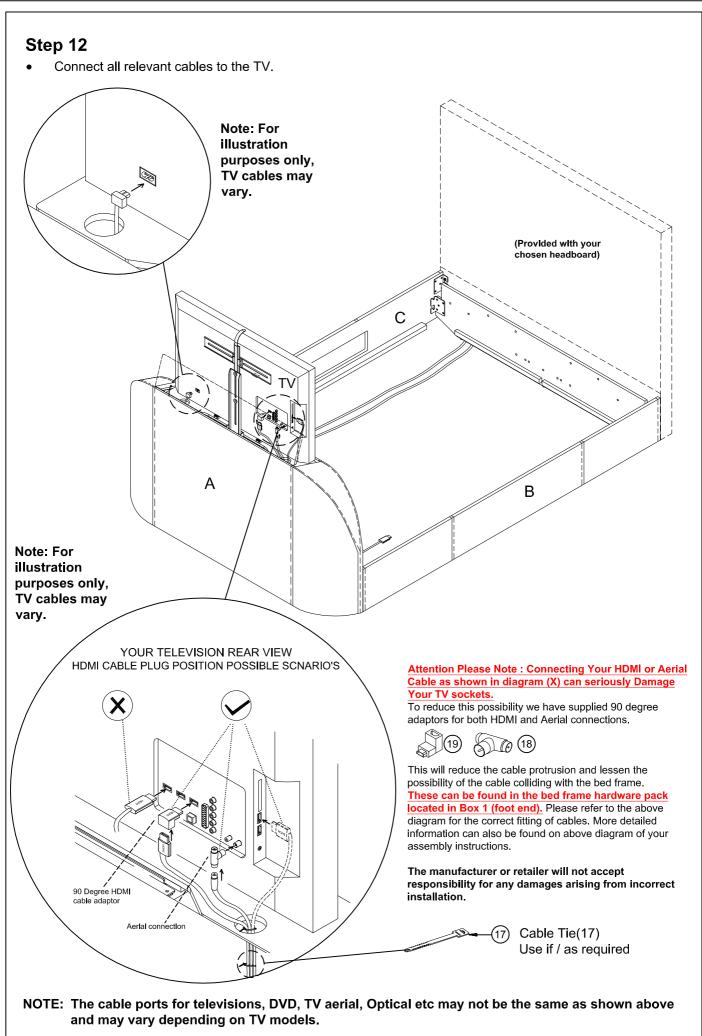



Page 14 of 30

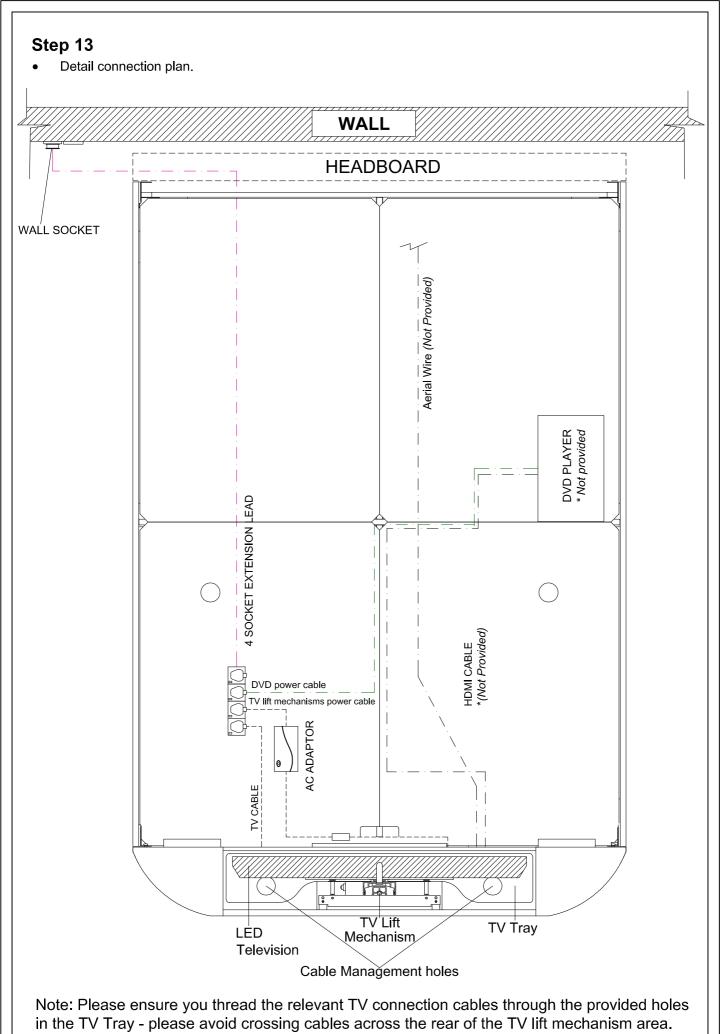


Page 15 of 30

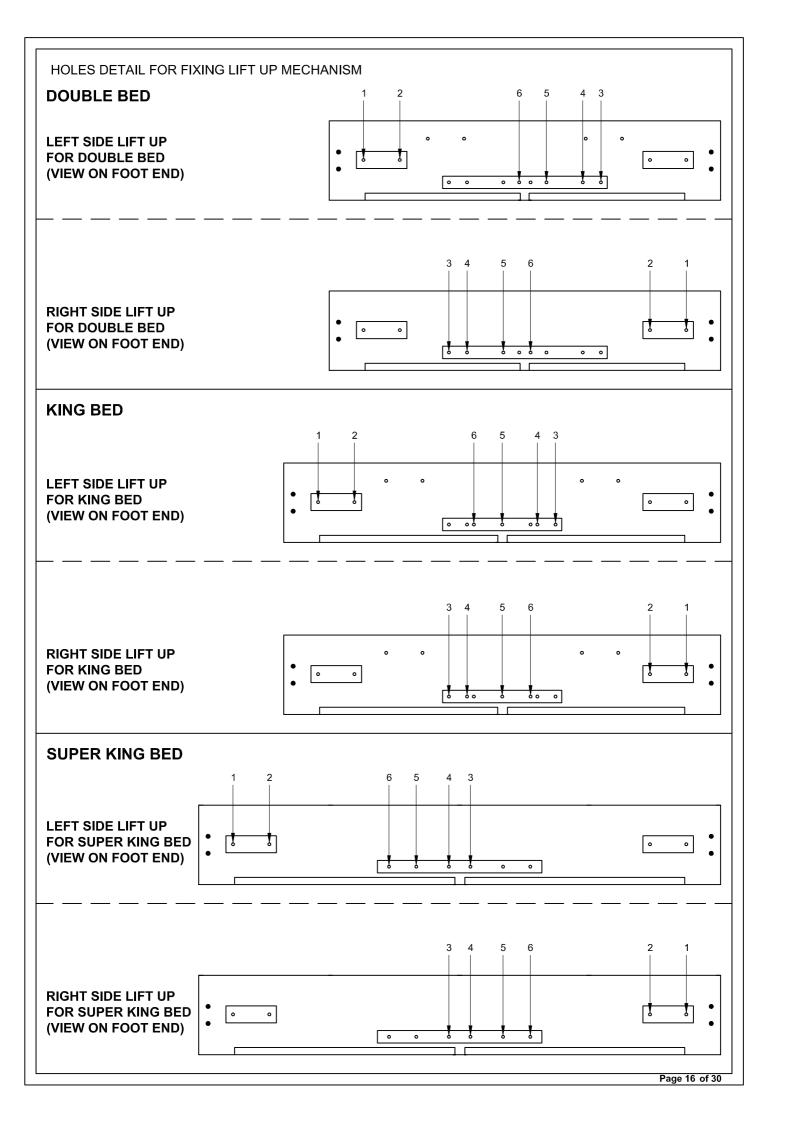

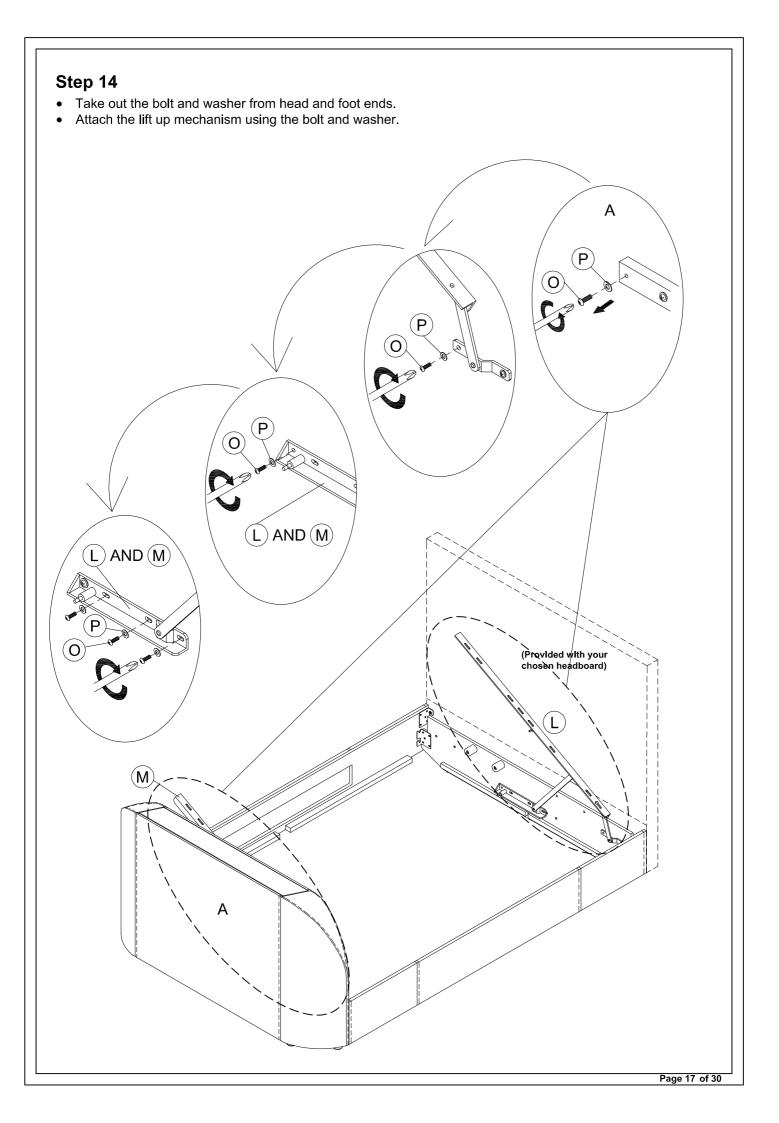


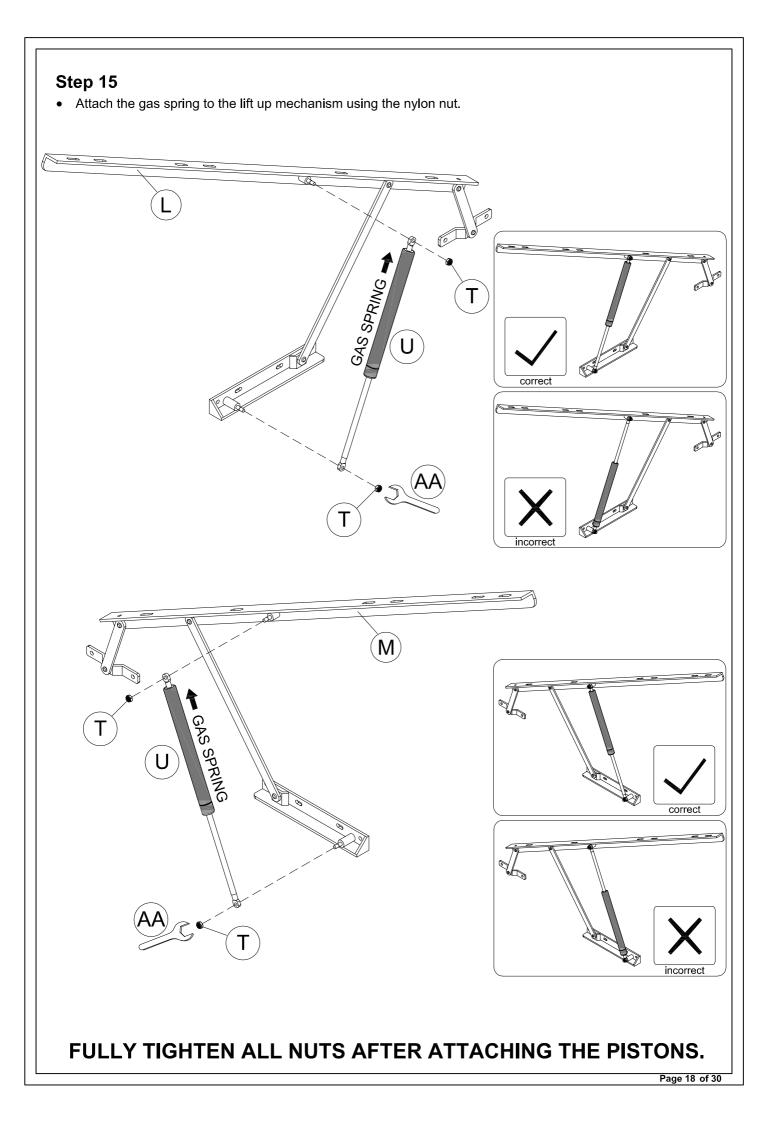


- Take out the all the screw and washer from lift base (J) as shown.
- For lift base (K), the last screw should be extend out 10mm as shown. The rest of screws & washers need to take out.

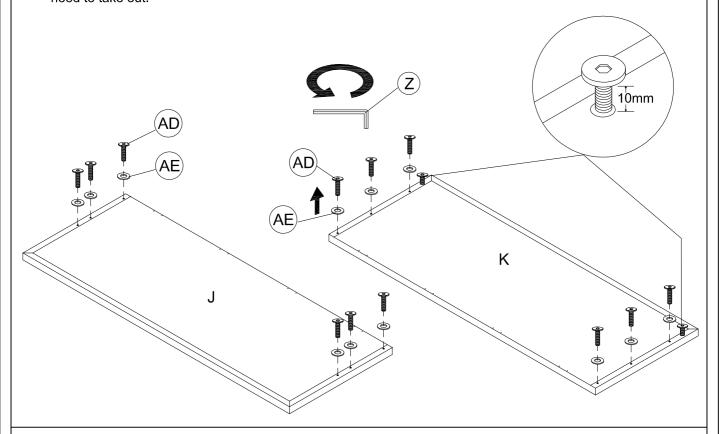


- Attach the handle to lift base (K) with screw (V) and washer (W).
- Attach the mattress stopper (X) to list base (K).

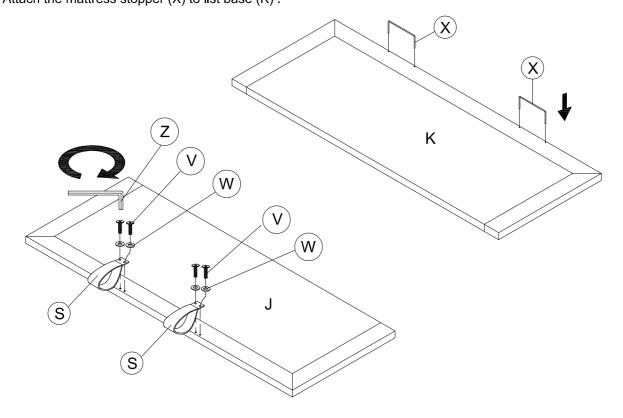


- First put the back lift base 'K' on top of lift up mechanism 'L' and 'M' with the provided Screws (AD) pre-installed as per step 16 to the first hole for safety and to prevent the lift base from dropping down.
- Use the removed bolts and flat washers on step 16 to fix the back lift base 'K' with lift up mechanism 'L' and 'M' as shown.
- Use Allen key 'Z' fully tighten all the bolts as shown.

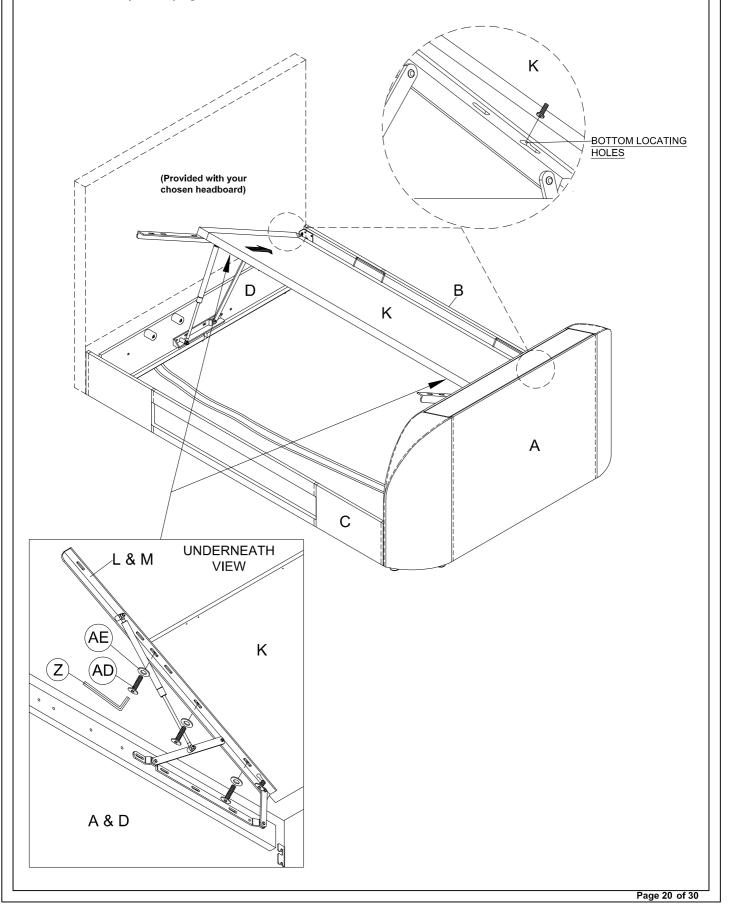


- Attach the bottom cross rail (long) (E) & bottom cross rail (short) (F) to the headboard, footboard and side rail as shown. Being carefull not to catch the fabric.
- Attach the bottom cross rail (long) (E) to the side rail (B & C) and the bottom cross rail (short) X2 pcs (F) to the head end panel (D) and footboard (A) as shown (STEP 19.1),(STEP 19.2) & (STEP 19.3).

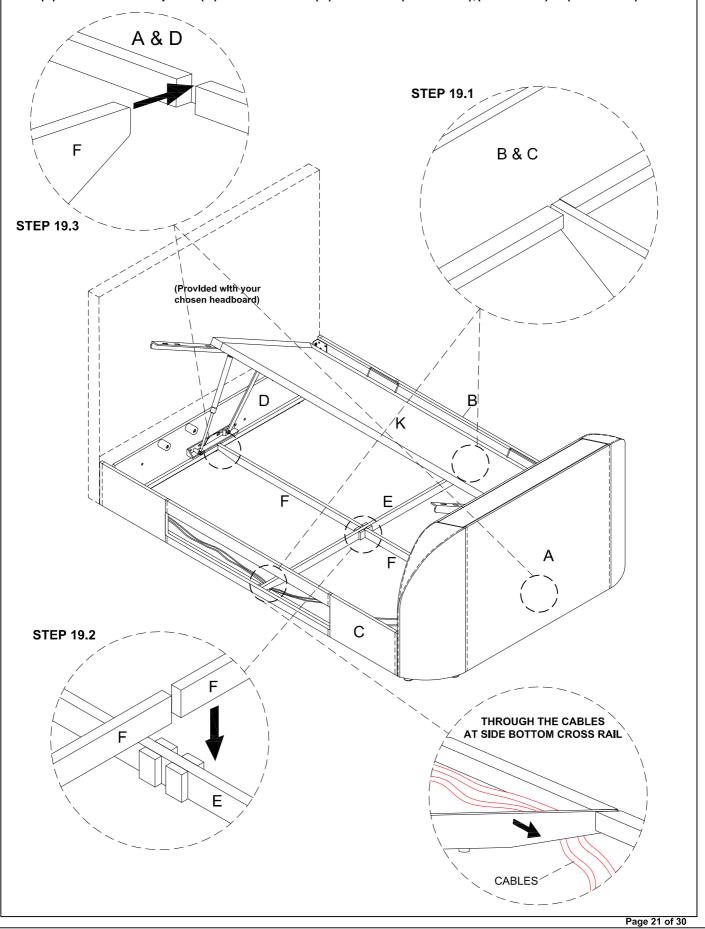


- Place the base panel (G-1) & (I) on top of the bottom cross rail.
- Put the base panel (I) to the foot end as shown.
- Make sure the base panel with 90 degree angle was placed next to the side rail 'B'.
- Then carefully slide the base panel to fit the location.
- Diagram show the bed opening in left side.

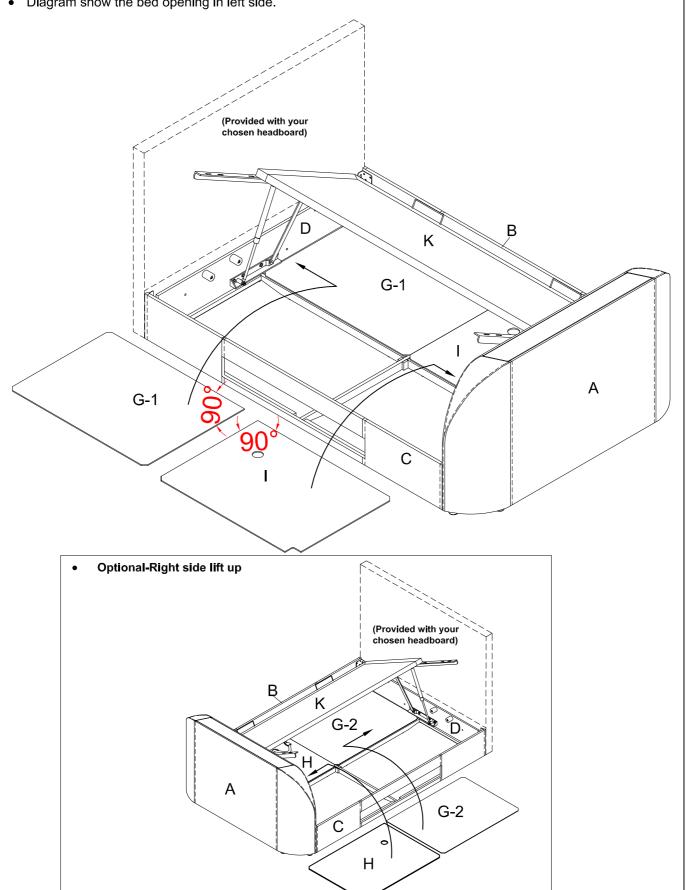


Page 22 of 30

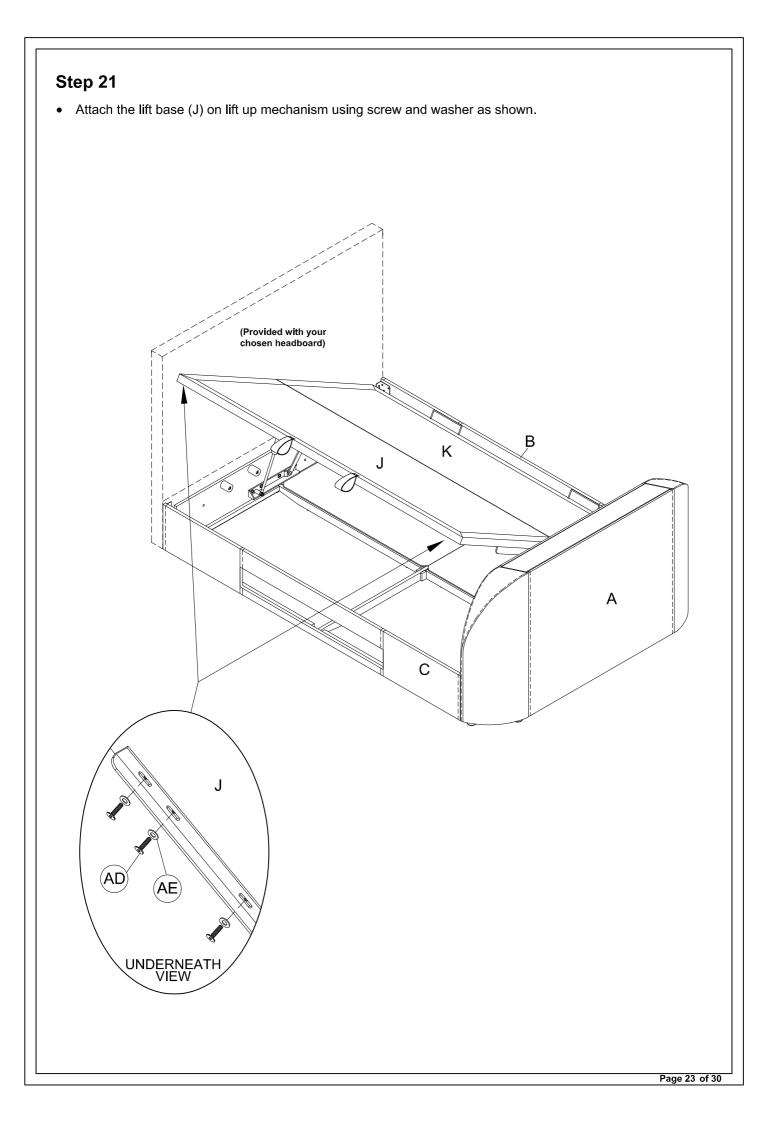


• Attach the metal plate (R) to the bottom of lift base (J) & (K) with screw (Q) as shown.

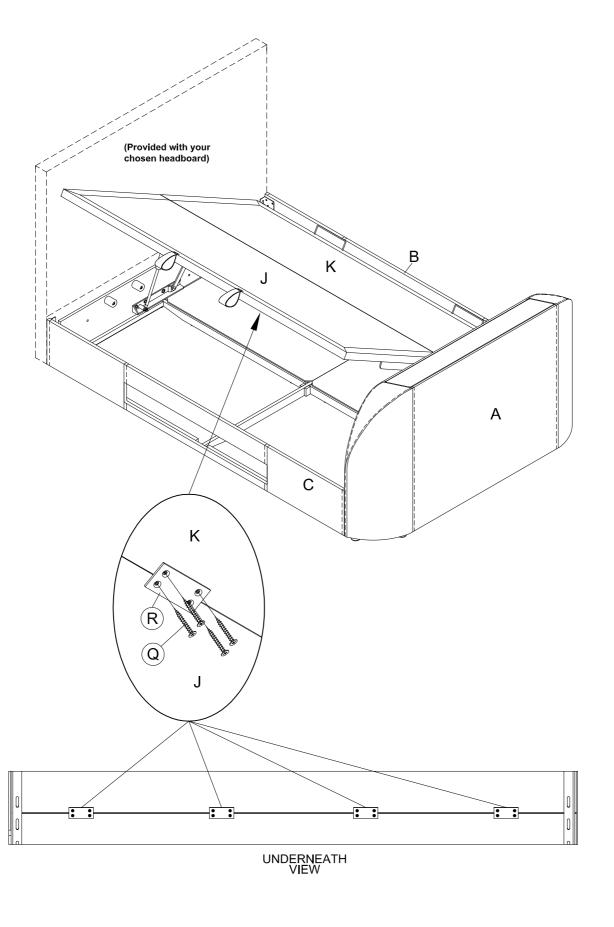


• Place the base panel (G-2) & (H) on top of the bottom cross rail.

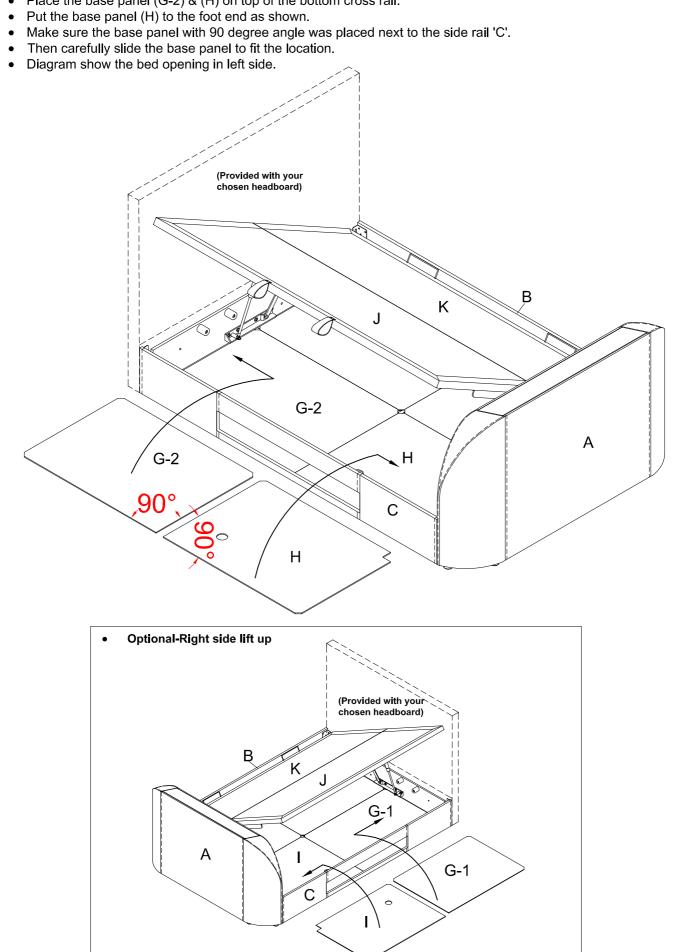

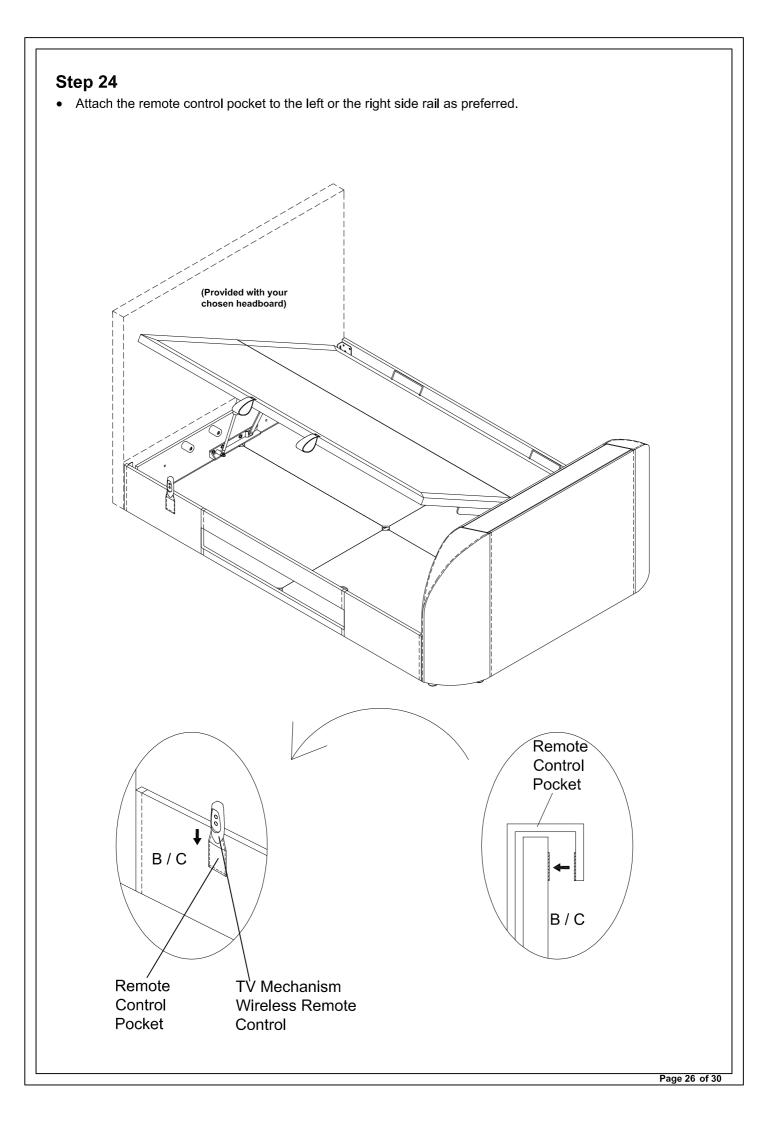

Attach the mattress before operating the lift base.

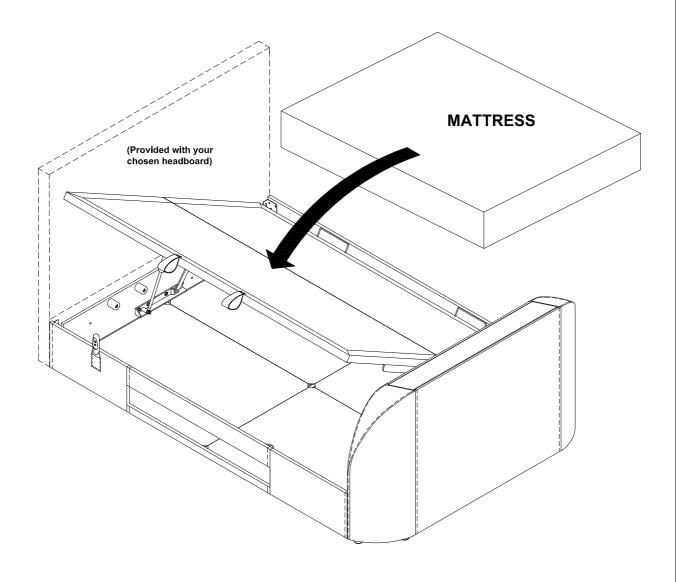

- A. This Lift Mechanism provides assistance with the lift of the mattress fitted to the base it does not lift the mattress for you. The system has been designed to effectively lift the base system fitted with a variety of mattress weights and combinations of depth. The combination of mattress weight and depth determines the degree of assistance provided by the mechanism.
- B. Following installation of the mechanism lift / pull the base up and down a few times to free off the system the gas cylinders fitted to the system may be stiff when first used or if the system has not been operated for a period of time . The mattress must be fitted to the base.
- C. Use the strap handle to lift up the mattress base using two hands Pull the mattress base down using two hands equally spaced from the centre of the mattress base. DO NOT pull down on one side of the base only as this is likely to damage the base system with potential failure of the mattress base system and lift mechanism. **Do not operate the lift up mechanism without the mattress fitted to the base.**

CAUTION: Do not allow children to operate the lift Mechanism.

Do not allow children near the lift base when operating the Mechanism.


Do not allow children in the area of the internal storage base.

Keep hands clear of the mechanism when operating the base system.

Do not stand inside the bed / on the internal storage base.


Do not overload the internal storage base.


• Make sure the bed frame 4 side angles are at 90 degrees before you closing the lift base.

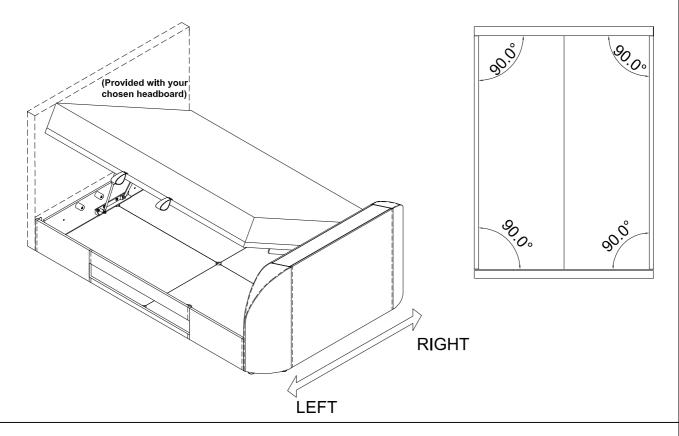


Step 27

• The mattress must be fitted on the lift base. (Do not operate the lift up mechanism without the mattress fitted on the lift base.)

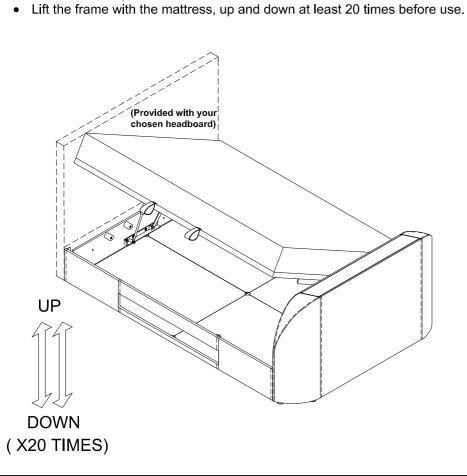

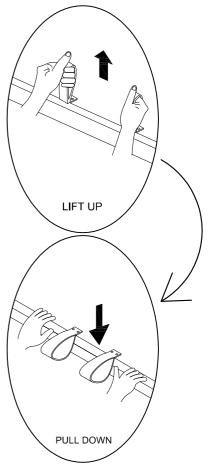


Page 28 of 30

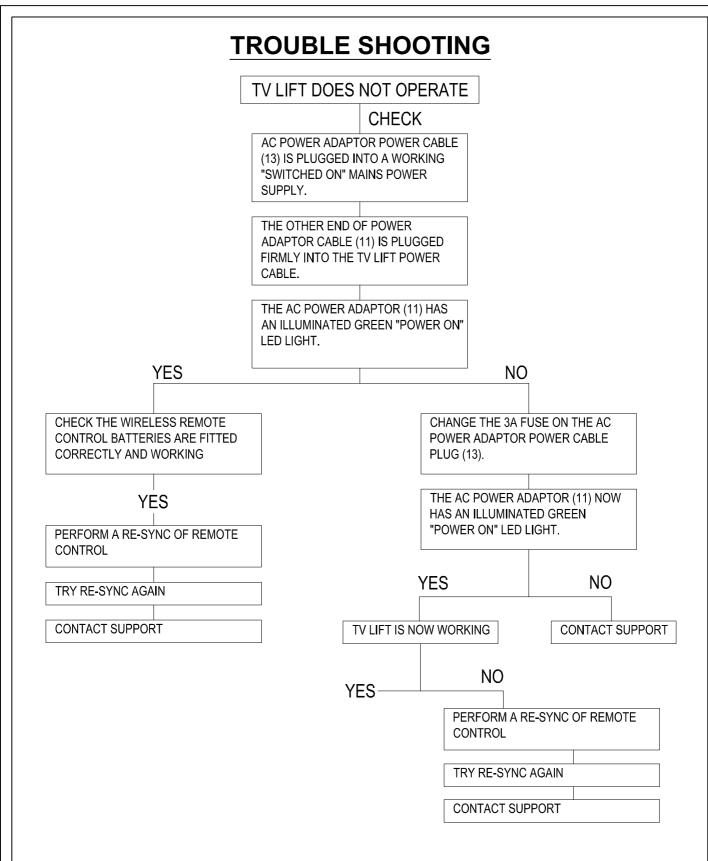

SPECIFICATION-TV MECHANSIM

Wireless Remote Control-TV LIFT MECHANISM
100V-240V~ 50/60Hz 1500mA
29V 2A
MAX 10% ; MAX 2 min / 18 min
Size: AAA - Ø10.5 X T44.5mm - Spec.: 1.5V

G4 TV LIFT MECHANISM- OPTI-SERVE SPARE PARTS LIST

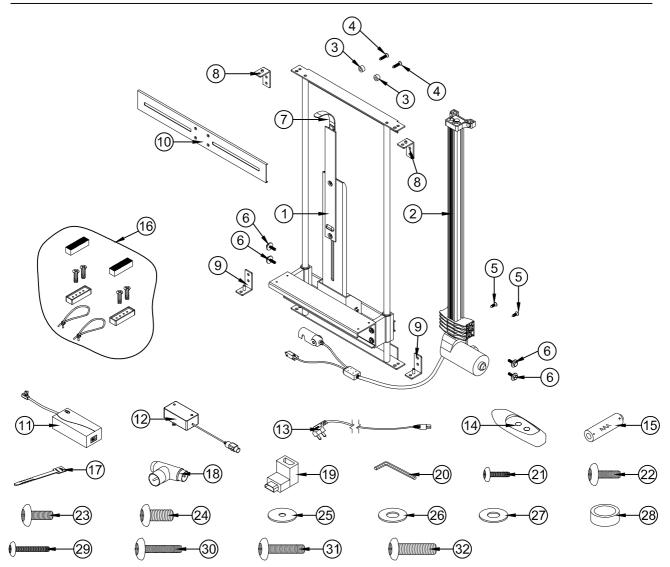

ITEM NO.	PART DESCRIPTION	IV CODES	
1	Maln TV-lift up mechanism (pre- assemble)		
2	TV-linear actuator G4 (pre-fixed)		
3	Actuator mounting top spacer (2pcs) (pre-fixed)	IV001281	
4	Cross recessed countersunk flat head wood screw- Top mounting M6 x 30mm (2pcs) (pre-fixed)	IV001282	
5	Cross recessed countersunk flat head wood screw- Top mounting M6 x 20mm (2pcs) (pre-fixed)		
6	Actuator mounting bolt- screw M6 x 20mm (4pcs) (pre-fixed)		
7	Gooseneck (pre-fixed)	IV001289	
8	Top hanging bracket (2pcs) (pre-fixed)	IV001636	
9	Bottom hanging bracket (2pcs) (pre-fixed)		
10	TV- flat bracket (Vesa Bracket) (pre-fixed)	IV001290	
11	TV-lift up mechanism AC/ DC adapter	IV001291	
12	TV lift-up mechanism control box (pre-fixed)	IV001293	
13	TV-lift up mechanism AC/ power-cable power plug UK	IV001295	
14	Wireless remote control	IV001302	
15	Battery (2pcs)	IV000991	
16	TV block (2pcs), screw M4 x 35mm (4pcs), block rubber cover (2pcs), cable management bungee cable (2pcs) (pre-fixed)	IV001635	
17	Cable cllp (2pcs)-use to flx wire		
18	Aerial connection (1pc)		
19	90 degree HDMI adaptor (1pc)		
20	Allen key (M4) (1pc)		
21	Pan head screw M4 x 20mm (2pcs)		
22	Pan head screw M5 x 20mm (2pcs)		
23	Pan head screw M6 x 20mm (2pcs)		
24	Pan head screw M8 x 20mm (2pcs)	IV001634	
25	M5 washer (2pcs)		
26	M6 washer (2pcs)		
27	M8 washer (2pcs)		
28	Plastic collar (6pcs)		
29	Pan head screw M4 x 40mm (2pcs)		
30	Pan head screw M5 x 40mm (2pcs)		
31	Pan head screw M6 x 40mm (2pcs)		
32	Pan head screw M8 x 40mm (2pcs)		





<u>UKCA/EU DECLARATION OF COMFORMITY & INCORPORATION</u>

Product ID: UKD-BD002846 / 47, UKQ-BD002848 / 49, UKK-BD002850 / 51

Description: SL ULTRA-1 MULTI UNI TV BED-MK3-STV-D5

Model: MK3-STV-D1 (4FT6, 5FT & 6FT)

Manufacturers: BSSB LEATHER AND FABRIC BEDS SDN BHD

LOT, 728, JALAN KU 6, TAMAN KLANG UTAMA 42100, KLANG SELANGOR, MALAYSIA


(Authorized representative): KAYDIAN DESIGN LIMITED

REDBURN HOUSE, REDBURN ROAD, WESTHERHOPE, NEWCASTLE UPON TYNE, NE5 1NB TEL:

+44(0)1912712118

Customer: KAYDIAN DESIGN LIMITED
Bed Model: 5 BOX M/U TV OTTOMAN BED

Product Image:

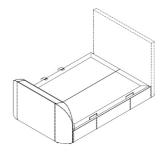

This declaration is issued under the sole responsibility of the manufacturer. We hereby certify that the product stipulated above complies with all the relevant provisions of the following EU/UKCA new approach directive/s:

- Electromagnetic Compatibility (EMC) 2014/30/EU
- Low Voltage Directive (LVD) 2014/35/EU
- Radio Equipment (RED) 2014/53/EU
- Restriction of Hazardous Substances (RoHS) 2011/65/EU
- Machinery Directive (MD) 2006/42/EC

Conformity is shown by compliance with the applicable requirements of the following harmonized standards:

Applicable Harmonized Standards	Title
(Standard reference, date and amendments)	(The title/description of the harmonized standard)
ETSI EN 300 440 V2.1.1 (2017-03)	2.4 GHz Short Range Device (SRD)
ETSI EN 301 440 V2.2.2 (2019-09)	2.4 GHz Short Range Device (SRD)
EN 62479:2010	10Mhz-300GHz

RED: Where applicable, include description of accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU/UKCA declaration of conformity

ATHER

Nas

Signed for and on behalf of: BSSB LEADTHER AND FABRIC BEDS SDN BHD

Name: MIKE LIM

Position: INNOVATION QUALITY MANAGER

Signature: