

---

## Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

---

### Necessary Tools



---

Please check the pack contents before attempting to assemble this product.

A full checklist of components is given in this leaflet.

This product is heavy, it should be assembled as near as possible to the point of use.

**TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.




This product takes approximately **30 MINUTES** to assemble with **2 PEOPLE**

The fittings pack contains **SMALL PARTS** which should be **KEPT AWAY FROM YOUNG CHILDREN**



Read this leaflet in full before commencing assembly.

# Fitting and parts checklist - Bedstead

## Bedstead Parts

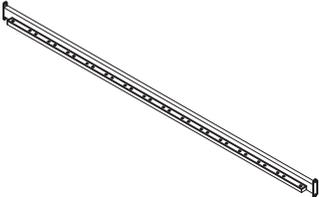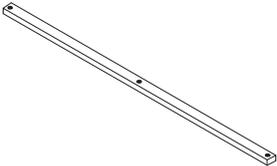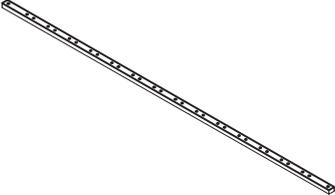1	Headboard x 1		2	Footboard x 1	
3	Side Rails x 2		4	Wooden Slats x 28	
5	Cross Bars x 2		6	Support Legs x 3	
7	Centre Rail x 1				


## Fittings

A	Washer x 8		B	JCBC Bolt x 12 (M6 x 25 mm)	
C	JCBC Bolt x 5 (M6 x 30 mm)		D	M6 JCN Nut x 6	
E	Adjuster x 3		F	Centre Stopper x 14	
G	Side Stopper x 28		H	M4 Allen Key x 2	

# Step by step assembly instructions


## Step One

Attach the Side Rails (3) to the Headboard (1) and Footboard (2) using Washer (A) and JCBC M6 x 25 mm Bolt (B). Tighten using Allen Key (H) as shown in the diagram below.

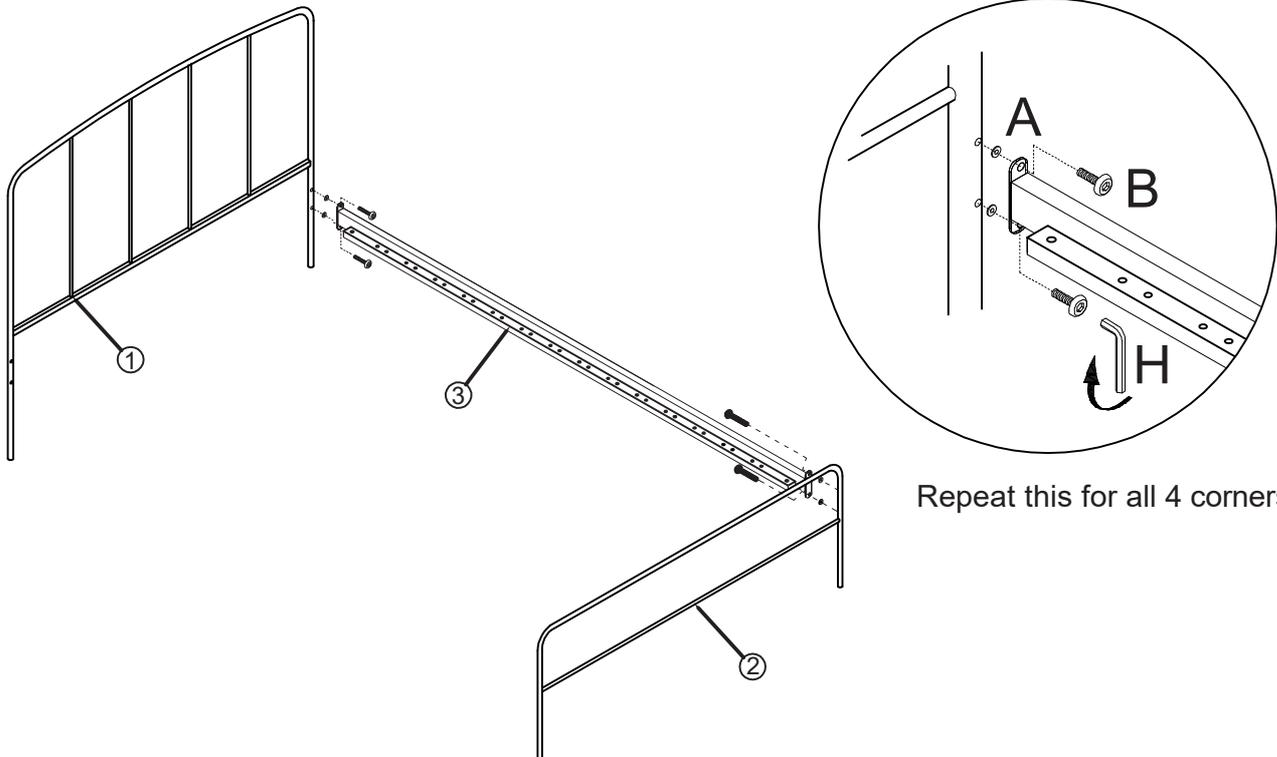



## Step Two

Place the Cross Bars (5) onto the Side Rails (3) and secure using JCBC M6 x 25 mm Bolt (B) and M6 JCN Nut (D). Tighten using Allen Key (H) as shown below.

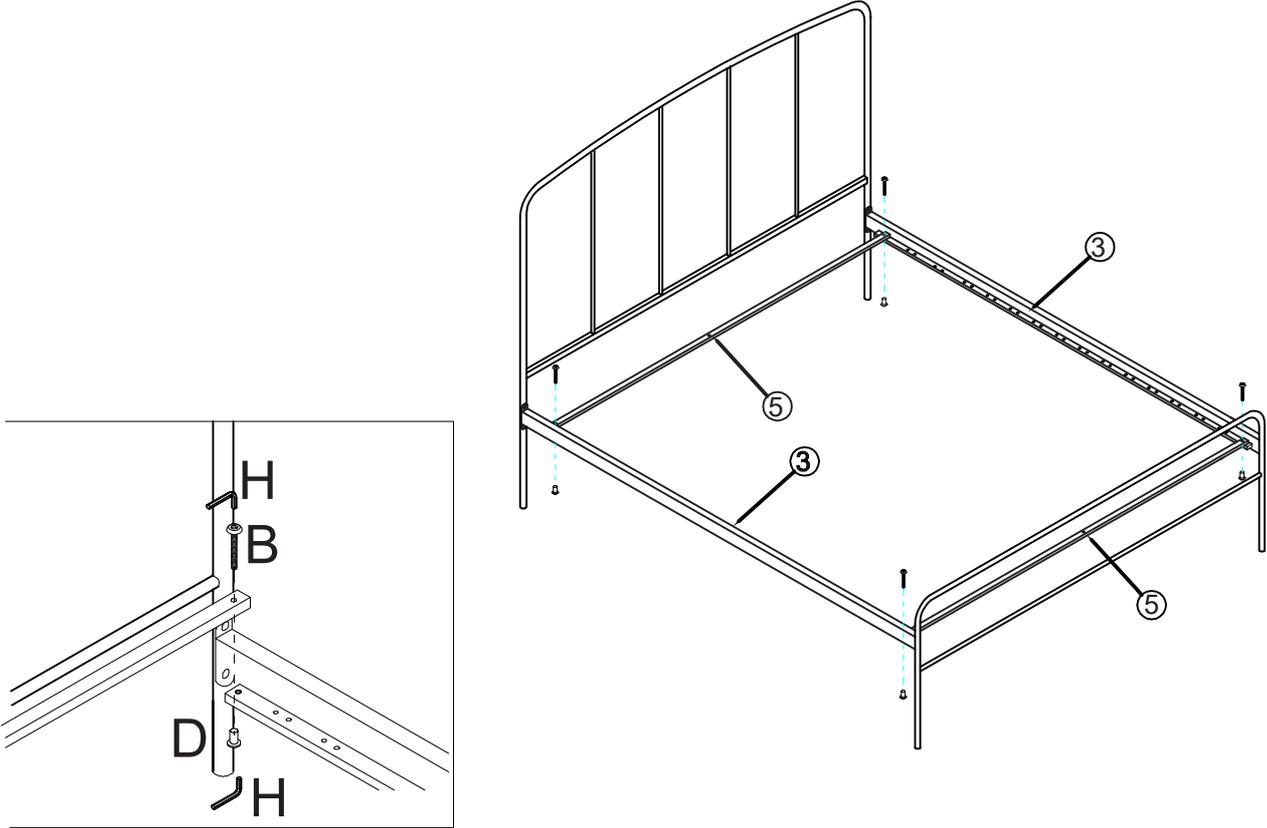




## Step Three

Ensuring the holes along the centre rail(7) are facing upwards, attach to the underside of the Cross Bars (5) using JCBC M6 x 30mm screw(C).

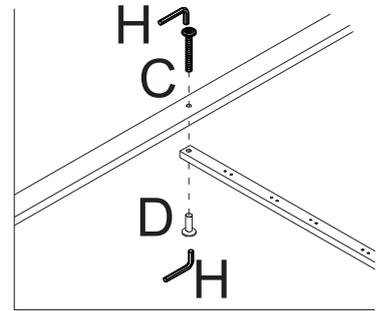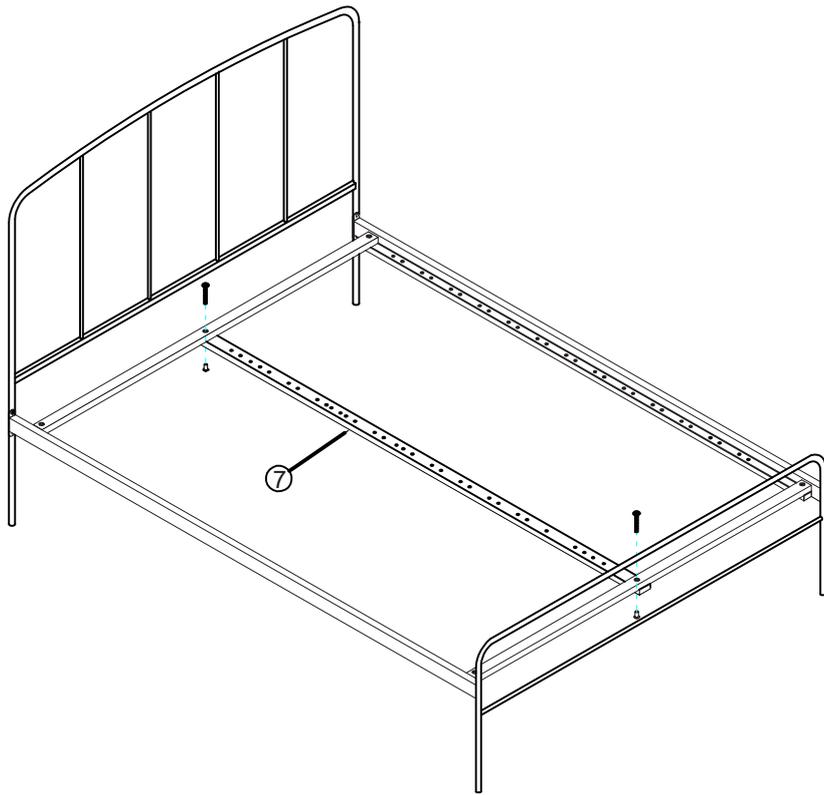




## Step Four

Screw the adjuster (E) in full in to the bottom of the Support Legs (6). Attach the Support Legs (6) to the underside of the centre rail (7) using M6x30mm screw (C) through the pre-drilled holes in the centre rail (7). Unscrew the adjuster(E) slightly, ensuring there is a small **gap of 5mm** in between the adjuster (E) and the hard point of the floor, keep in mind the tread of your carpet.

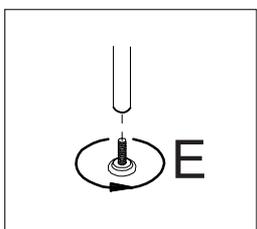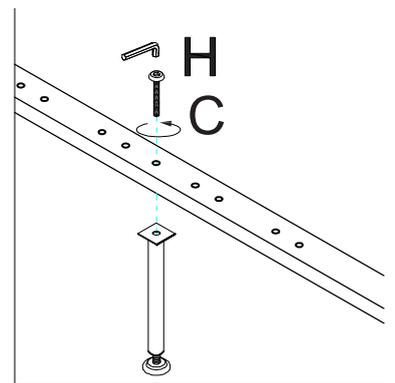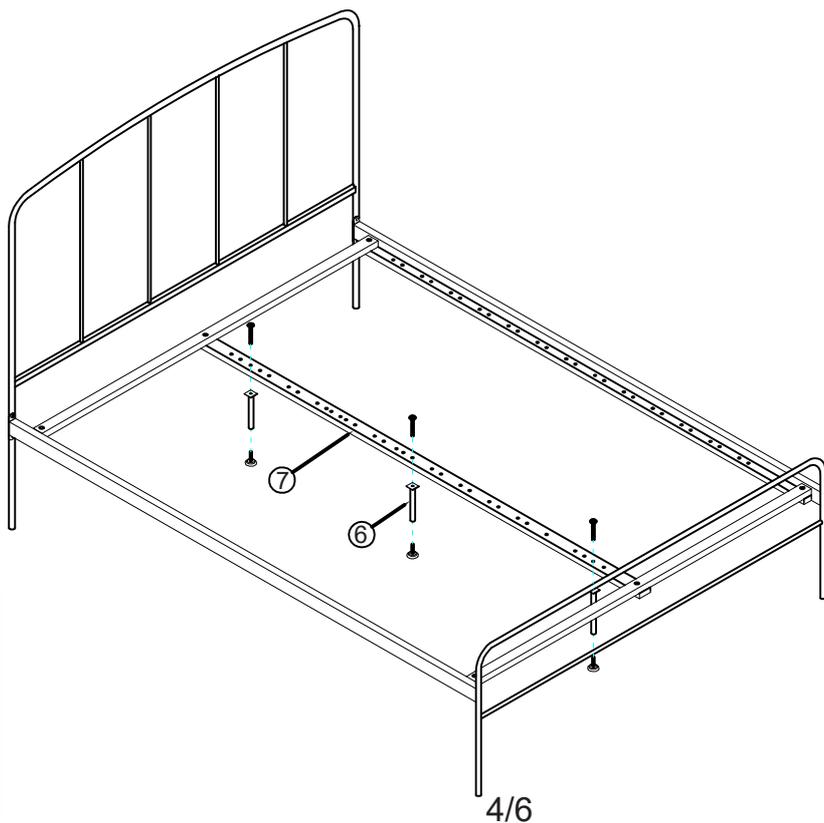

## Step Five

With the curved side facing upwards, insert 2 Slats (4) into a Centre Stopper (F) followed by a Side Stopper (G) onto the other end of both slats. Use your palms to push down the centre plastic caps into the centre rail followed by the side plastic caps into the side rail as shown in the diagram below.

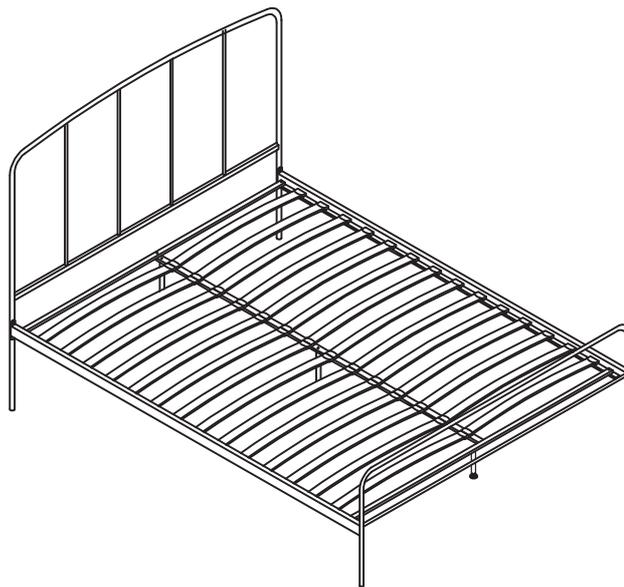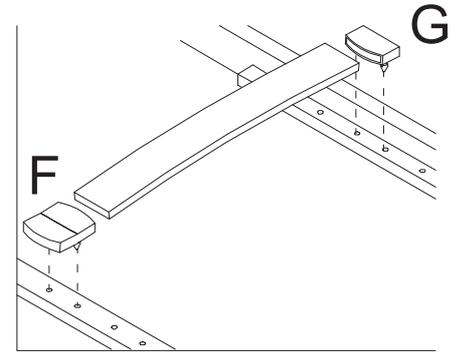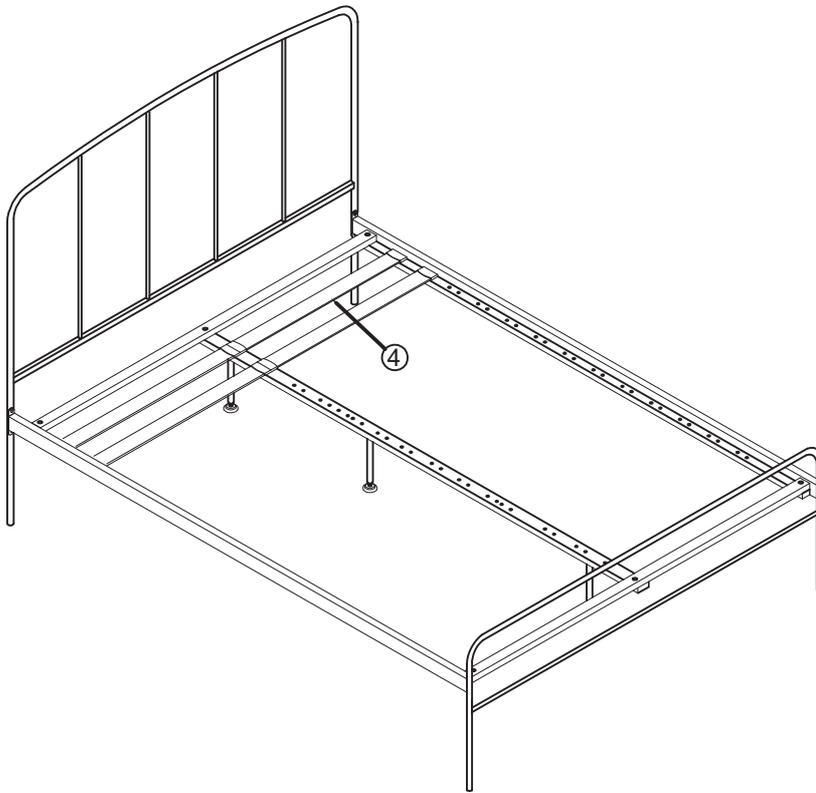

This Bed is now ready to use

---

# Care and Maintenance

---

## Metal

This bedstead should be cleaned using a soft damp cloth and dried immediately. Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use abrasive cleaner or harsh detergents as this can damage the surface. Do not drag any object across the bed as this can cause permanent damage.

---

## Safety Instructions

---

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury. Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent adult. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture. During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

It is recommended that before moving heavy objects to a new location they are completely dis-assembled to avoid personal injury or damage to the furniture . Please be careful to retain all fittings when doing this.

This product complies with BS 1725:1998