

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Necessary Tools



Please check the contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact customer services on 01244 689949.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

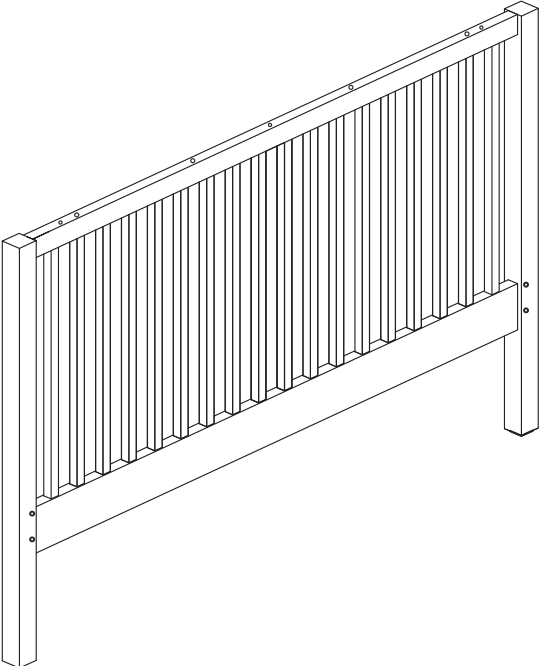
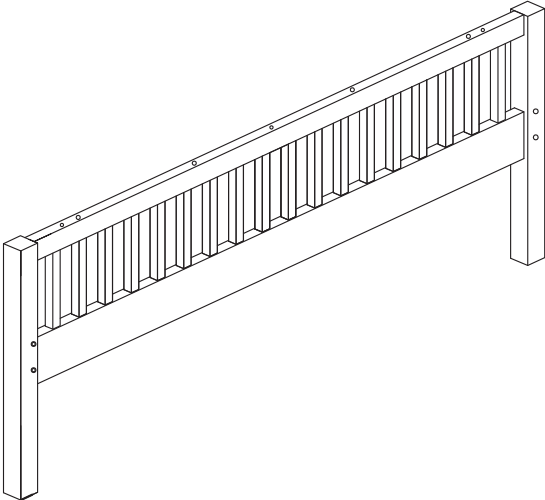




This product takes approximately **40 MINUTES** to assemble with **2 PEOPLE**.

The fitting pack contains **SMALL PARTS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.









Read this leaflet in full before commencing assembly.

Fitting and parts checklist - bedstead

Parts

1	Headboard x 1	
2	Footboard x 1	
3	Top Rail x 2	
4	Side Rails x 2	
5	Centre Rail x 1	
6	Wooden Slats x 28	

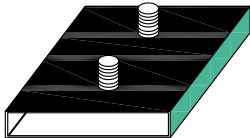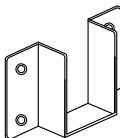
Fittings

A	M8 x 22 x 8 Bolt	
B	M6 x 60 x 6 Bolt	
C	Ø10 x 30mm Dowel x 8	
D	Cap Ends x 28	
E	Slat Connector x 14	
G	Centre Rail Cup x 2	
H	M4 x 20 Screw x 8	
I	Allen Key x 1	

Step by step assembly instruction



Step One

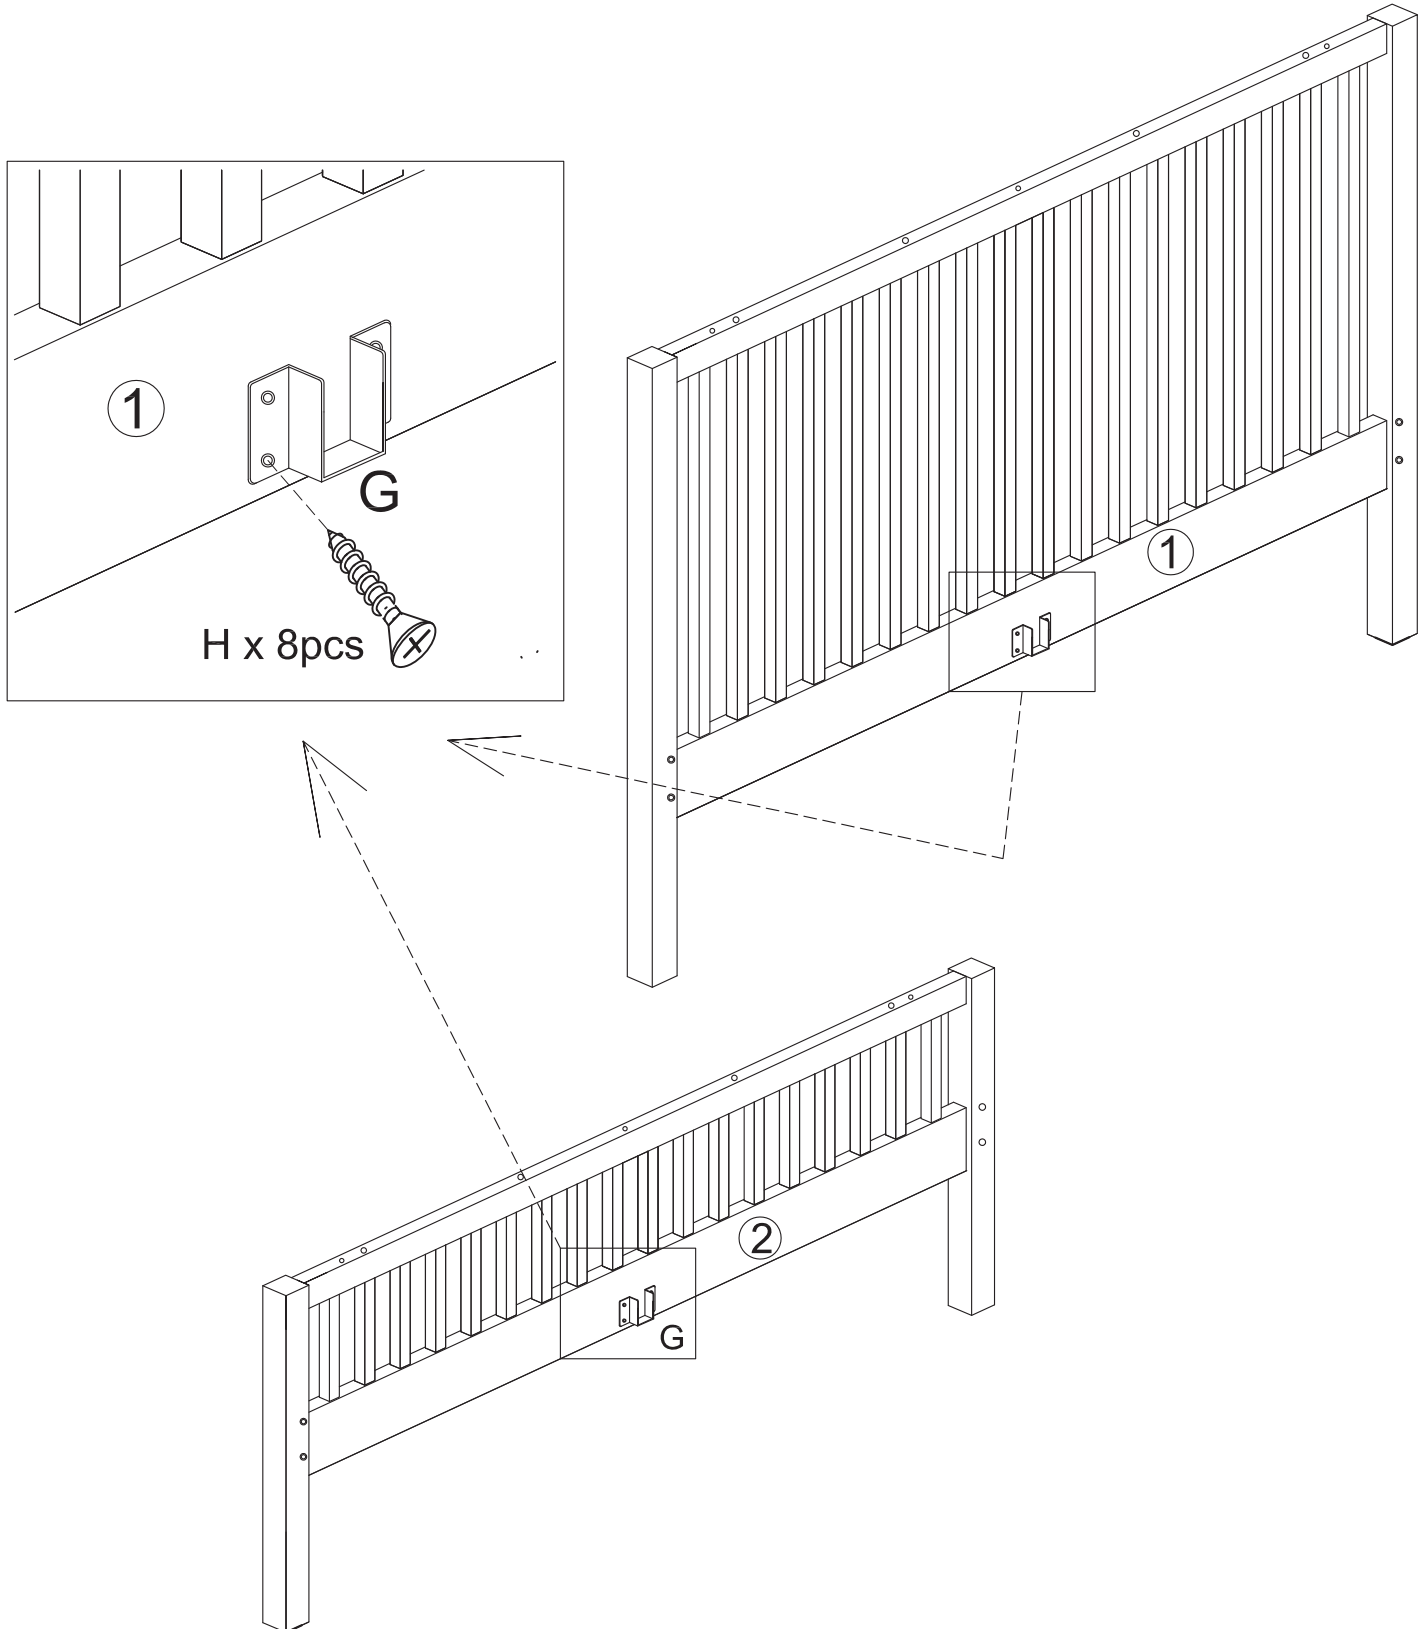Fix the Centre Rail Cup (G) onto the pre - drilled holes on the lower part of the Headboard (1) and Footboard (2) using M4 Screw (H), as shown in the diagram below.




Step Two

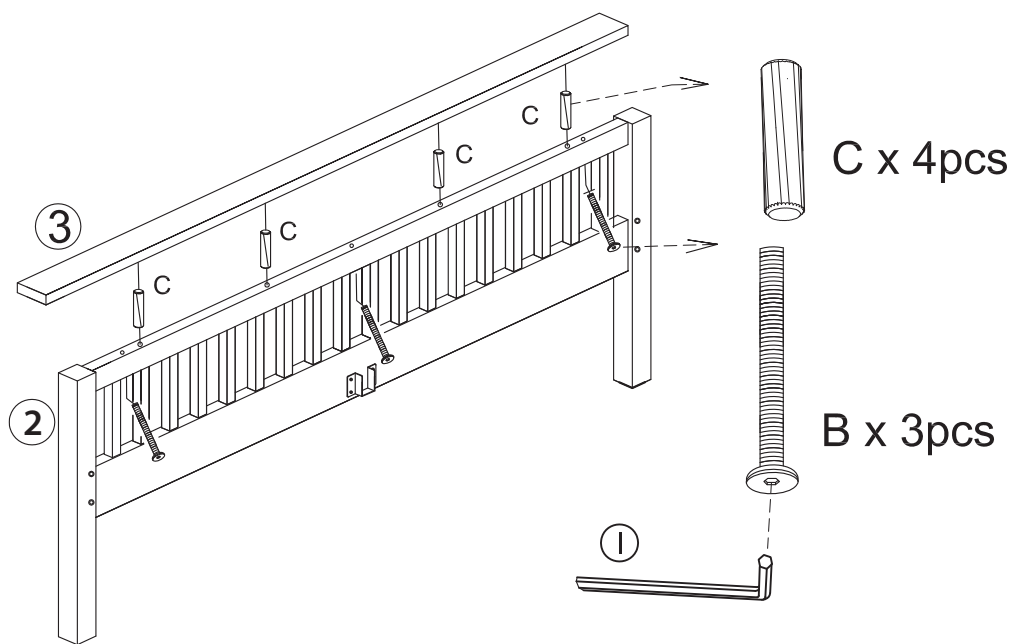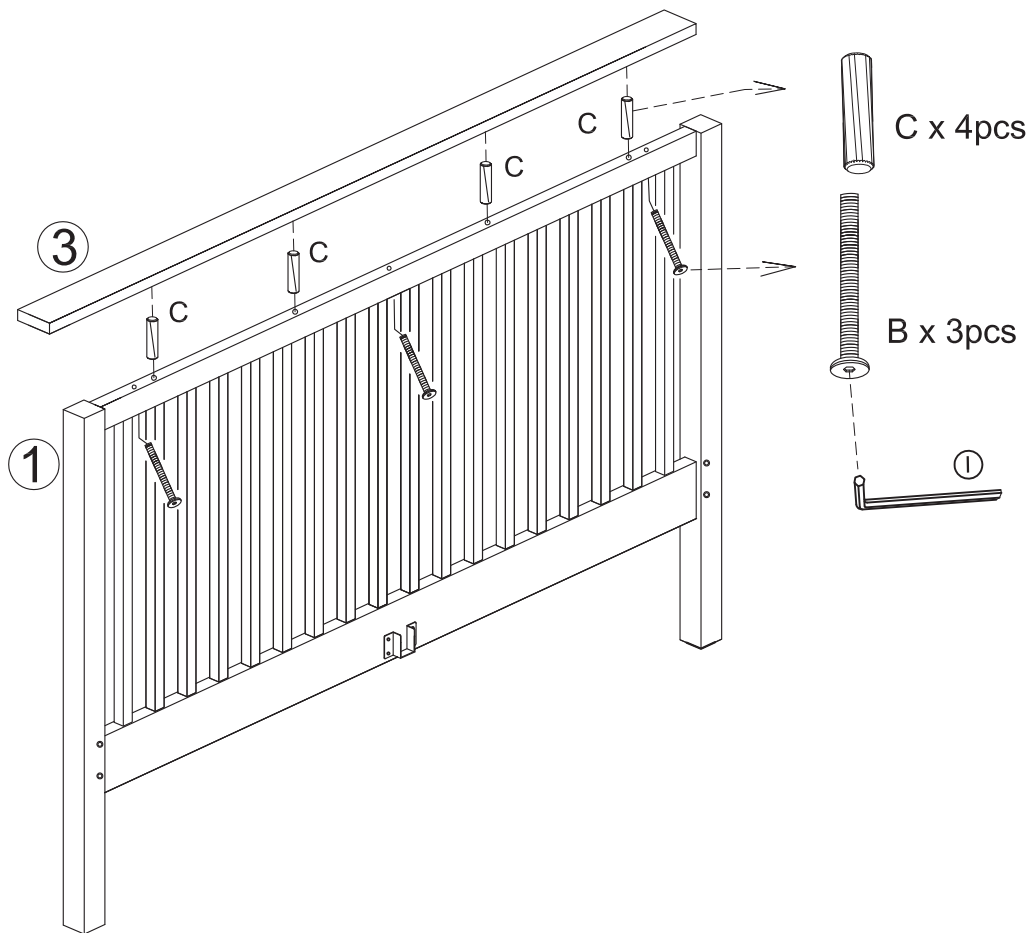Start by placing the Dowels (C) into the holes on the top part of the Headboard (1) and Footboard (2). Next fix the Top Rails (3) to the Headboard (1) and Footboard (2) using M6 Bolt (B). Tighten the Bolt using Allen Key (I), as shown in the diagram below.




Step Three

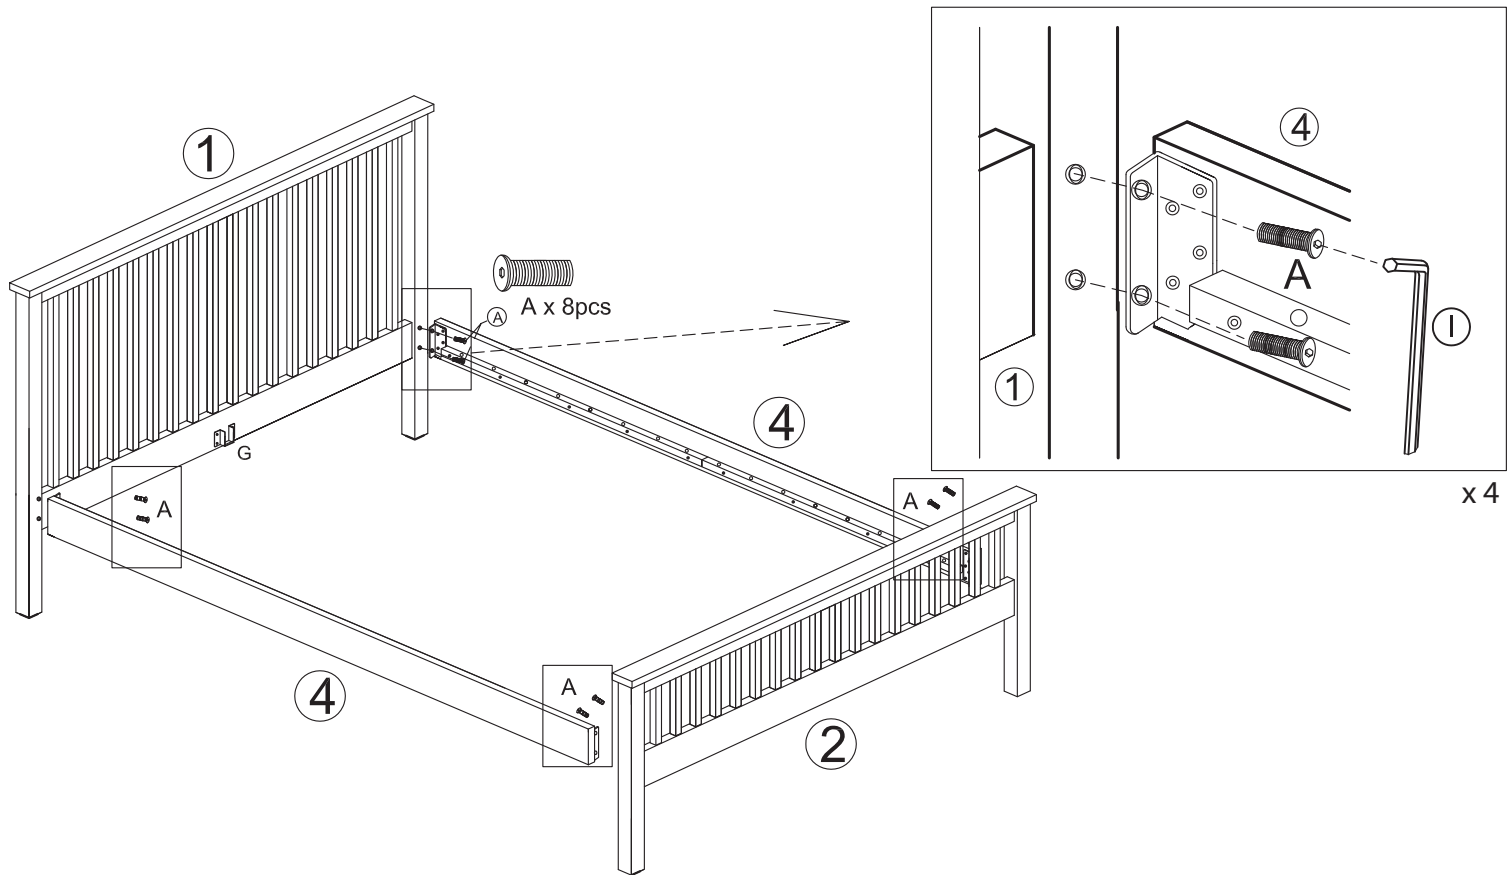Fix the Side Rail (4) to the Headboard (1) and Footboard (2) using M8 Bolt (A), Tighten using Allen Key (I), as shown below.





Step Four

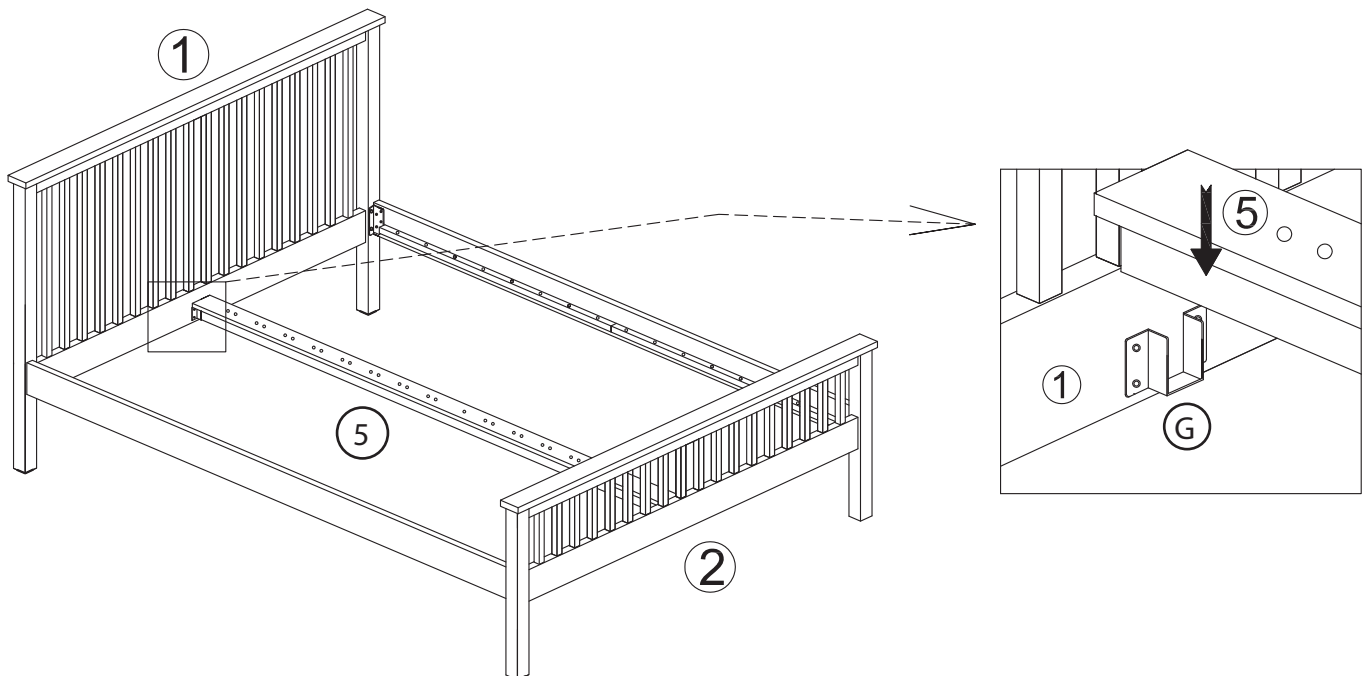Lower the Centre Rail (5) onto the Centre Rail Cups (G) on the Headboard (1) and Footboard (2) as shown in the diagram below.



Step Five

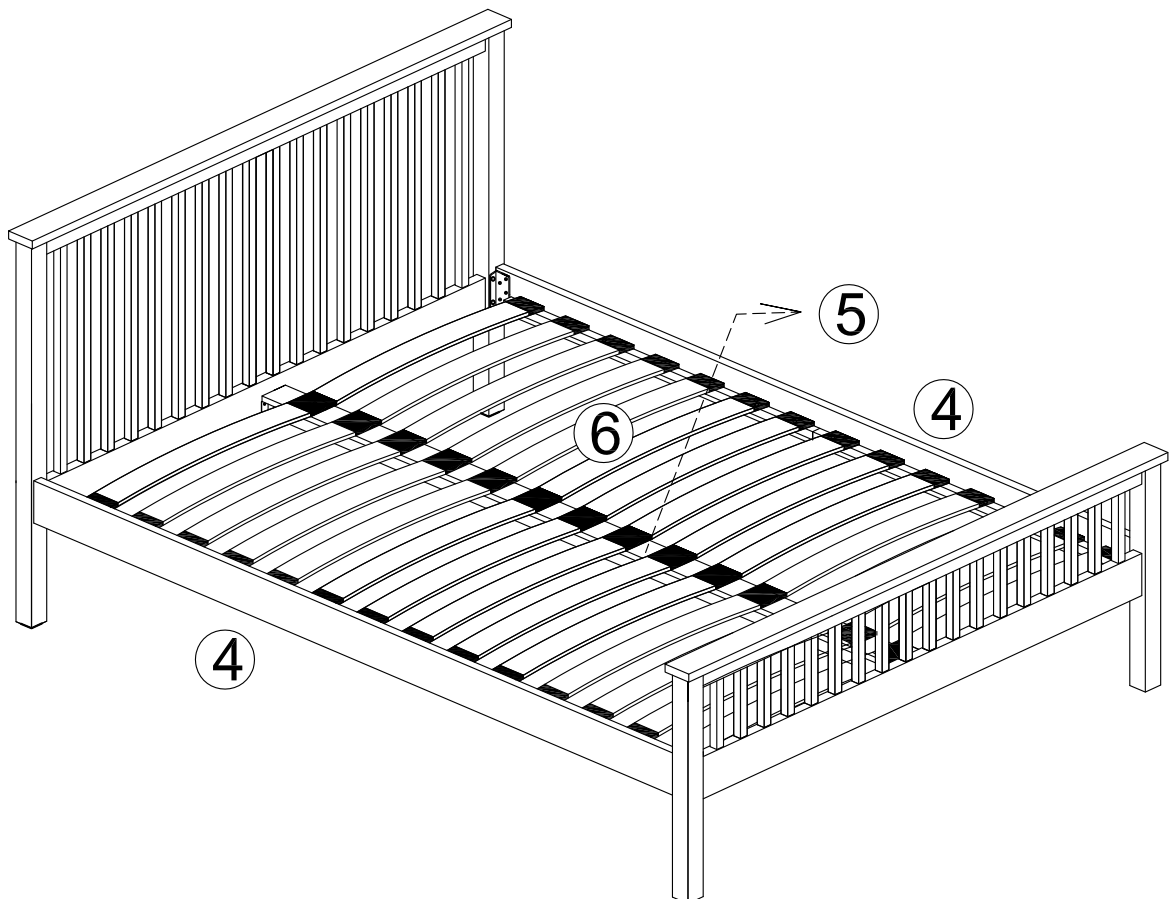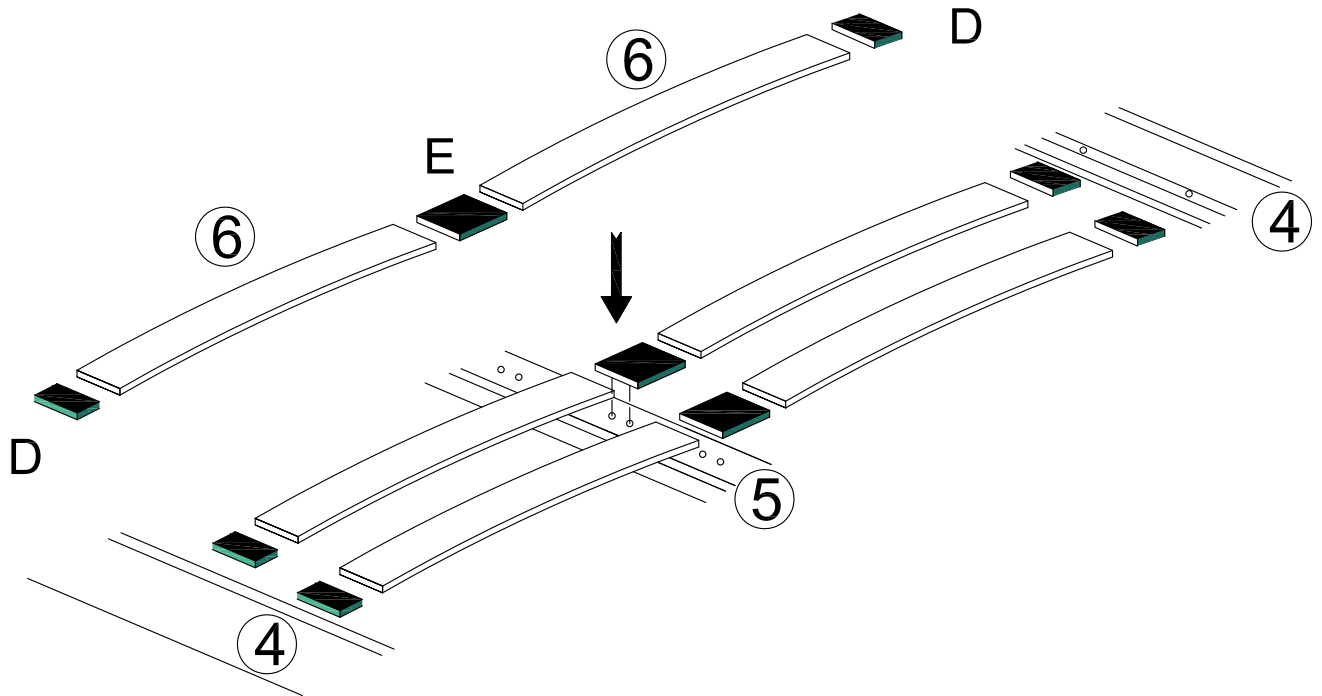Insert the Slat Connector (E) along the Centre Rail (5) into the pre - drilled holes. Next, insert a Slat (6) into a Slat Connector (E). Then place a Cap End (D) onto the other end of the Slat (6). Finally, fully push the Cap End (D) into the pre - drilled holes on the Side Rail (4). Repeat this process for all the Slats (6), as shown below.



Care and Maintenance

Wooden Bed.

Wooden furniture should be cleaned using a soft damp cloth and dried immediately. Do not use a very wet cloth or allow any liquid contact for a long period of time as this can permanently damage the surface.

Do not use abrasive cleaner or harsh detergents as this can damage the surface.

Do not drag any object across the bed as this can cause permanent damage.

Safety Instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re - tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury. Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent adult. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture. During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any of the components are missing or damaged.

It is recommended that before moving heavy objects to a new location they are completely dis - assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

This product complies with BS 1725 : 1998.